HY12S65

HYCON-IDE Software

User Manual

© 2012 HYCON Technology Corp.

www.hycontek.com

Table of Contents

1. HYCON-IDE OVERVIEW 4
1.1 Introduction 4
1.2 HYCON-IDE Installation and System Requirement 4
1.3 Install and Remove 5
Install 5
Remove 8
1.4 Registration 8
1.5 Demo Code Description 10
2. HYCON-IDE INTERFACE DESCRIPTION 12
2.1 HYCON-IDE Edit Interface 12
Edit Window 13
File 14
Edit 14
View 14
Assemble & Run 15
Interface Setup 15
Windows 19
Program Structure 19
Self-defined Instruction 19
3. HYCON-IDE DEBUG INTERFACE 21
3.1 Fast Execution 22
3.2 RAM Window 25
3.3 Register Window 28
3.4 Watch Window 30
3.5 Stack Window 32
3.6 ADC Window 33
3.7 Power Window 38
3.8 MPN Window 40
3.9 Register Record 45
3.10 Hint Function of Source Code Window 47
4. PROGRAMMING WINDOWS 49
4.1 Interface Setup 49
4.2 Operation Procedures 51
4.2.1 Open File and Assembly 52
4.2.2 Download HEX File 55

© 2012 HYCON Technology Corp

4.3 PC ONLINE OTP PROGRAMMING 56
4.3.1 Blank Check 57
4.3.2 Program 57
4.3.3 Verify 58
4.3.4 Read 58
4.3.5 AUTO 60
4.4 PC OFFLINE PROGRAMMING 61
4.4.1Programming Description 61
4.4.2 Program Times Restriction 64
5. TROUBLESHOOTING 64
5.1HYCON-IDE EXECUTION PROBLEM 64
6.REVISION HISTORY 64

1. HYCON-IDE Overview

1.1 Introduction

To facilitate the process of product development, HYCON-IDE platform is provided to develop the full range of HYCON MCUs. Customers can implement in-circuit emulation of the end-products on this platform and program the code onto OTP products of HY series.

1.2 HYCON-IDE Installation and System Requirement

Minimum requirements for operating HYCON-IDE:

- PC Hardware Request:

PC compatible machine with PENTIUM® CPU

128 MB Memory (256MB is recommended)

10 GB Hard Disk Space

- Supporting Products:

-HY12P65

- Supporting Hardware Model No.:

-HY12S65-DK01 development kit

- Supporting Software Version:

HY-CON IDEDMM V1.1 and above

- Compatibility of Program Version:

N/A

© 2012 HYCON Technology Corp

- OS:

Windows 98SE

Windows 2000

Windows XP

Windows Vista

Windows 7

Support x86, 32bit system, 64bit system not in support.

- Applicable Interface:

USB Port

1.3 Install and Remove

Install

Note: For some Windows OS, it may require to have administrator identity to install the Hex Loader to the computer.

- Insert the HYCON-IDE CD into the CD ROM drive and find the file in the CD ROM or file to execute Setup.exe.
- Following the instruction window dialogs step by step to continue setup procedures. As shown in Figure 1-1.
- First-time installation must initiate USB driver program, the setup procedures are as Figure 2 shown.

© 2012 HYCON Technology Corp

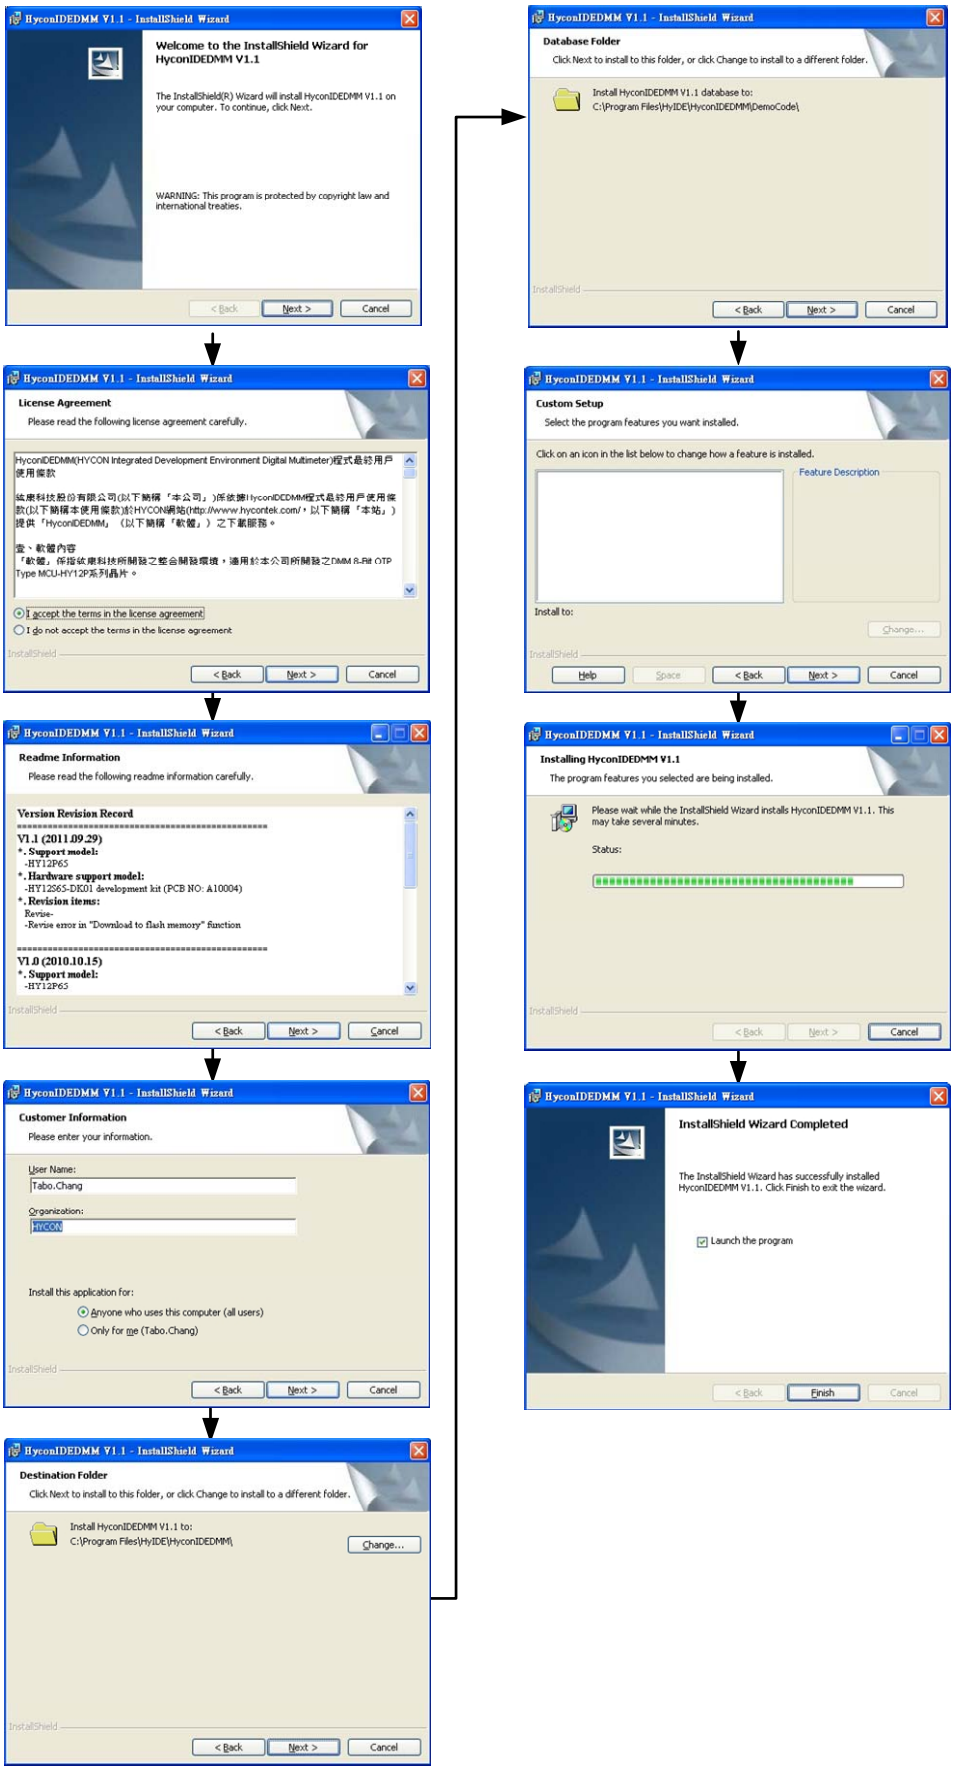
HyconIDEDMM V1.1 - InstallShield Wizard
Welcome to the InstallShield Wizard for HyconIDEDMM V1.1
The InstallShield(R) Wizard will install HyconIDEDMM V1.1 on your computer. To continue, click Next.
WARNING: This program is protected by copyright law and international treaties.
< Back
Next >
Cancel
License Agreement
Please read the following license agreement carefully.
I accept the terms in the license agreement
I do not accept the terms in the license agreement
Readme Information
Please read the following readme information carefully.
Version Revision Record
V1.1 (2011.09.29)
*. Support model:
-HY12P65
*. Hardware support model:
-HY12S65-DK01 development kit (PCB NO: A10004)
*. Revision items:
Revise-
-Revise error in "Download to flash memory" function
V1.0 (2010.10.15)
*. Support model:
-HY12P65
Customer Information
Please enter your information.
User Name:
Tabo.Chang
Organization:
HYCON
Install this application for:
Anyone who uses this computer (all users)
Only for me (Tabo.Chang)
Destination Folder
Click Next to install to this folder, or click Change to install to a different folder.
Install HyconIDEDMM V1.1 to:
C:\Program Files\HyIDE\HyconIDEDMM\
Change...
Database Folder
Click Next to install to this folder, or click Change to install to a different folder.
Install HyconIDEDMM V1.1 database to:
C:\Program Files\HyIDE\HyconIDEDMM\DemoCode\
Custom Setup
Select the program features you want installed.
Click on an icon in the list below to change how a feature is installed.
Feature Description
Install to:
Change...
Help
Space
Installing HyconIDEDMM V1.1
The program features you selected are being installed.
Please wait while the InstallShield Wizard installs HyconIDEDMM V1.1. This may take several minutes.
Status:
InstallShield Wizard Completed
The InstallShield Wizard has successfully installed HyconIDEDMM V1.1. Click Finish to exit the wizard.
Launch the program
Finish

Figure 1

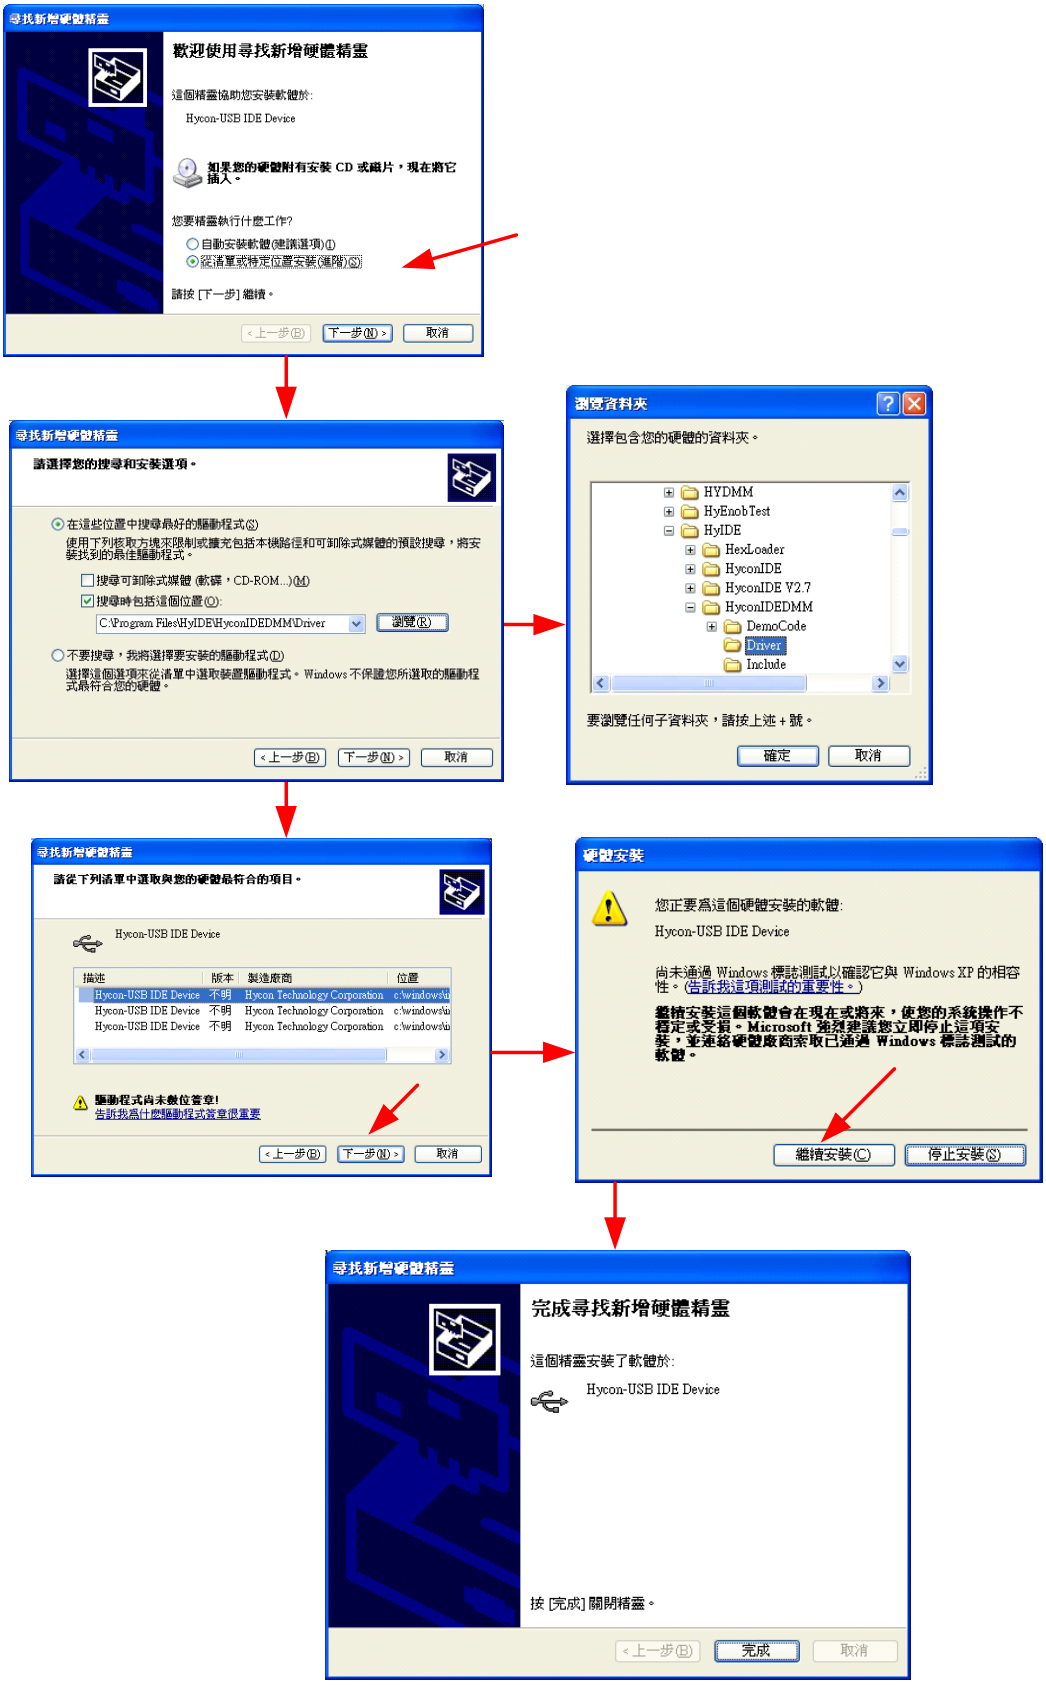
尋找新增硬體精靈
歡迎使用尋找新增硬體精靈
這個精靈協助您安裝軟體於:
Hycon-USB IDE Device
如果您的硬體附有安裝 CD 或磁片，現在將它插入。
您要精靈執行什麼工作?
自動安裝軟體(建議選項)(I)
從清單或特定位置安裝(進階)(S)
請按 [下一步] 繼續。
< 上一步(B)
下一步(N) >
取消
尋找新增硬體精靈
請選擇您的搜尋和安裝選項。
在這些位置中搜尋最好的驅動程式(S)
使用下列核取方塊來限制或擴充包括本機路徑和可卸除式媒體的預設搜尋，將安裝找到的最佳驅動程式。
搜尋可卸除式媒體 (軟碟，CD-ROM...)(M)
搜尋時包括這個位置(O):
C:\Program Files\HyIDE\HyconIDEDMM\Driver
瀏覽(R)
不要搜尋，我將選擇要安裝的驅動程式(D)
選擇這個選項來從清單中選取裝置驅動程式。Windows 不保證您所選取的驅動程式最符合您的硬體。
< 上一步(B)
下一步(N) >
取消
瀏覽資料夾
選擇包含您的硬體的資料夾。
HYDMM
HyEnobTest
HyIDE
HexLoader
HyconIDE
HyconIDE V2.7
HyconIDEDMM
DemoCode
Driver
Include
要瀏覽任何子資料夾，請按上述 + 號。
確定
取消
尋找新增硬體精靈
請從下列清單中選取與您的硬體最符合的項目。
Hycon-USB IDE Device
描述
版本
製造廠商
位置
Hycon-USB IDE Device 不明 Hycon Technology Corporation c:\windows\in
Hycon-USB IDE Device 不明 Hycon Technology Corporation c:\windows\in
Hycon-USB IDE Device 不明 Hycon Technology Corporation c:\windows\in
驅動程式尚未數位簽章!
告訴我為什麼驅動程式簽章很重要
< 上一步(B)
下一步(N) >
取消
硬體安裝
您正要為這個硬體安裝的軟體:
Hycon-USB IDE Device
尚未通過 Windows 標誌測試以確認它與 Windows XP 的相容性。(告訴我這項測試的重要性。)
繼續安裝(C)
停止安裝(S)
尋找新增硬體精靈
完成尋找新增硬體精靈
這個精靈安裝了軟體於:
Hycon-USB IDE Device
按 [完成] 關閉精靈。
< 上一步(B)
完成
取消

Figure 2

Remove

Please remove the file of “HYCON-IDEDMM V1.1” in “Add/Remove Program” under Control Panel.

1.4 Registration

For first time using ICE for simulation or program OTP chip, users must apply for a register code as to proceed operation.

Figure 3

Registration Procedures:

1. Please check the HyIDE Machine Number (HyIDE Code) on the parcel and send the number by e-mail or on-line registration. HYCON will send back another customer register code to you.
2. Connect the HyIDE Control Board to PC through USB interface.
3. Execute HYCON-IDE software (HYCONIDE.exe). Go to ”Option” and press ”Register”.
4. Fill in the customer code in “Register Number” and click “Write” to start.

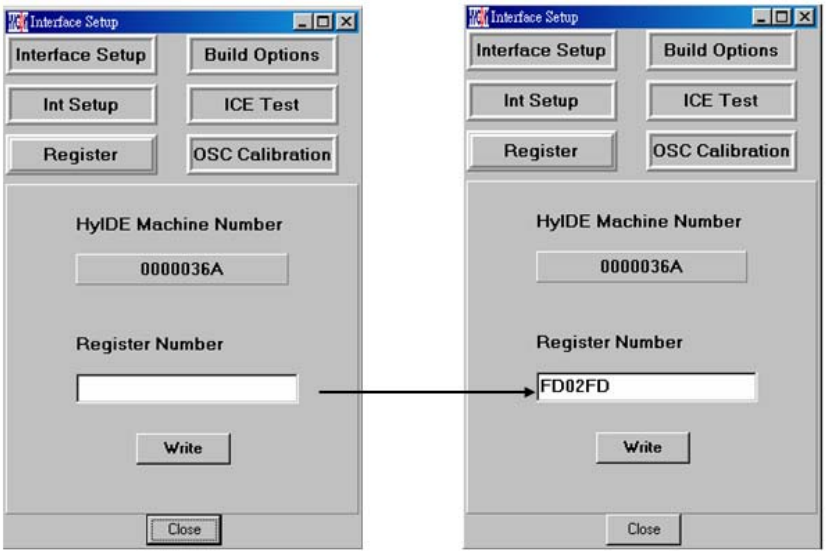

Figure 4

5. If the process is successful, a dialog will be shown as follows.

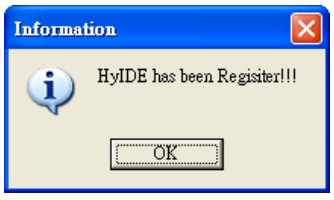

Figure 5

6. If the process failed, a dialog will be shown as Figure 6.

Figure 6

7. Once the register is succeeded, Customers do not have to worry that other numbers may be written into the “Register Number”

1.5 Demo Code Description

- Starting C:\Program Files\HyIDE\HyconIDEDMM\DemoCode\Ref Code\Test.asm
- Set the file as assembly main file
- Assembly start and proceed program debug

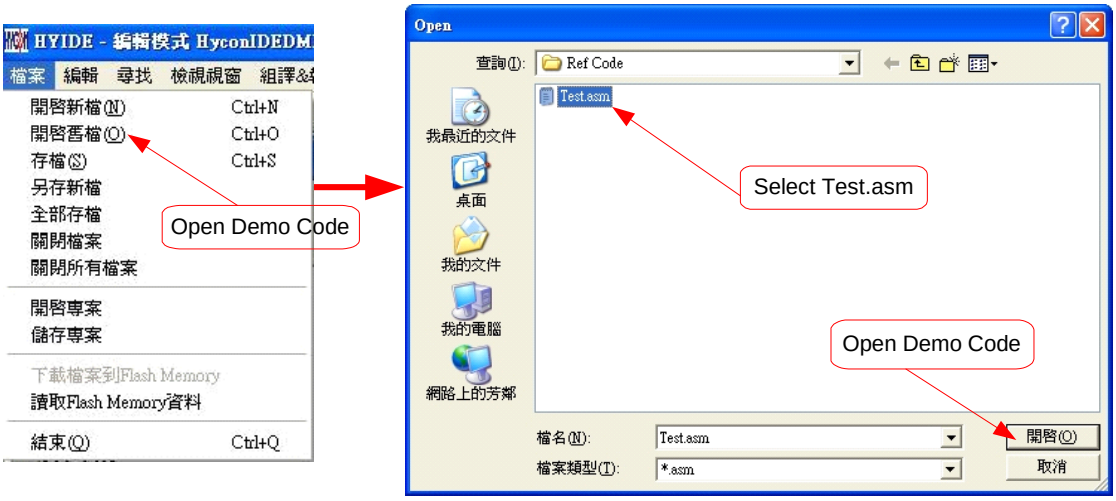

Figure 7

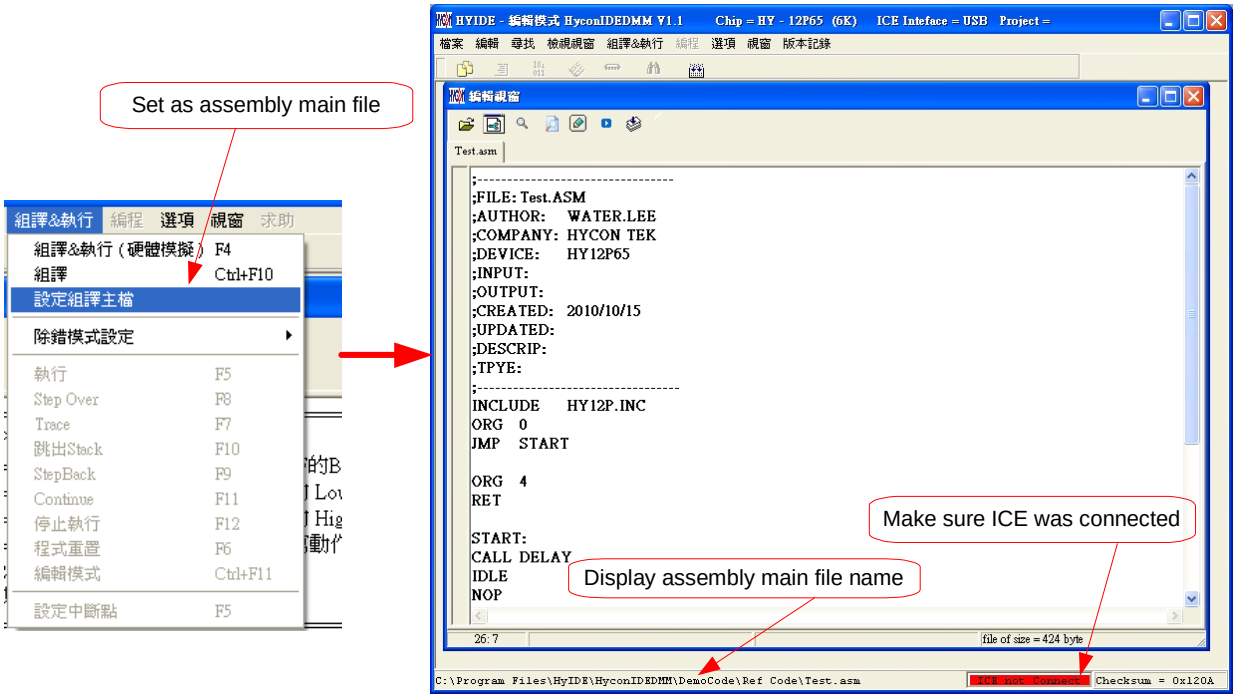

Figure 8

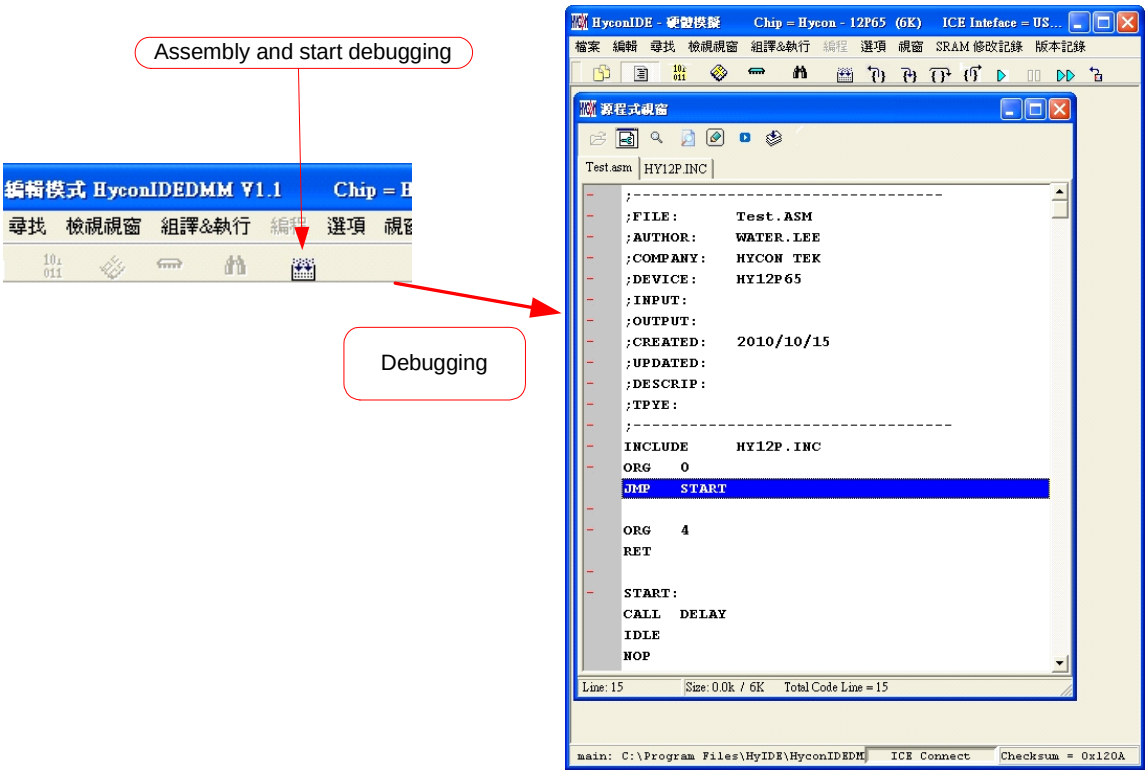

Figure 9

- Users can use any compiler to edit Source Code, as long as it can be stored in ASCII Code format. Source code will be reloaded when program compiles to ensure its correctness. Debugging and edit function will be depicted respectively in the following chapters.

2. HYCON-IDE Interface Description

2.1 HYCON-IDE Edit Interface

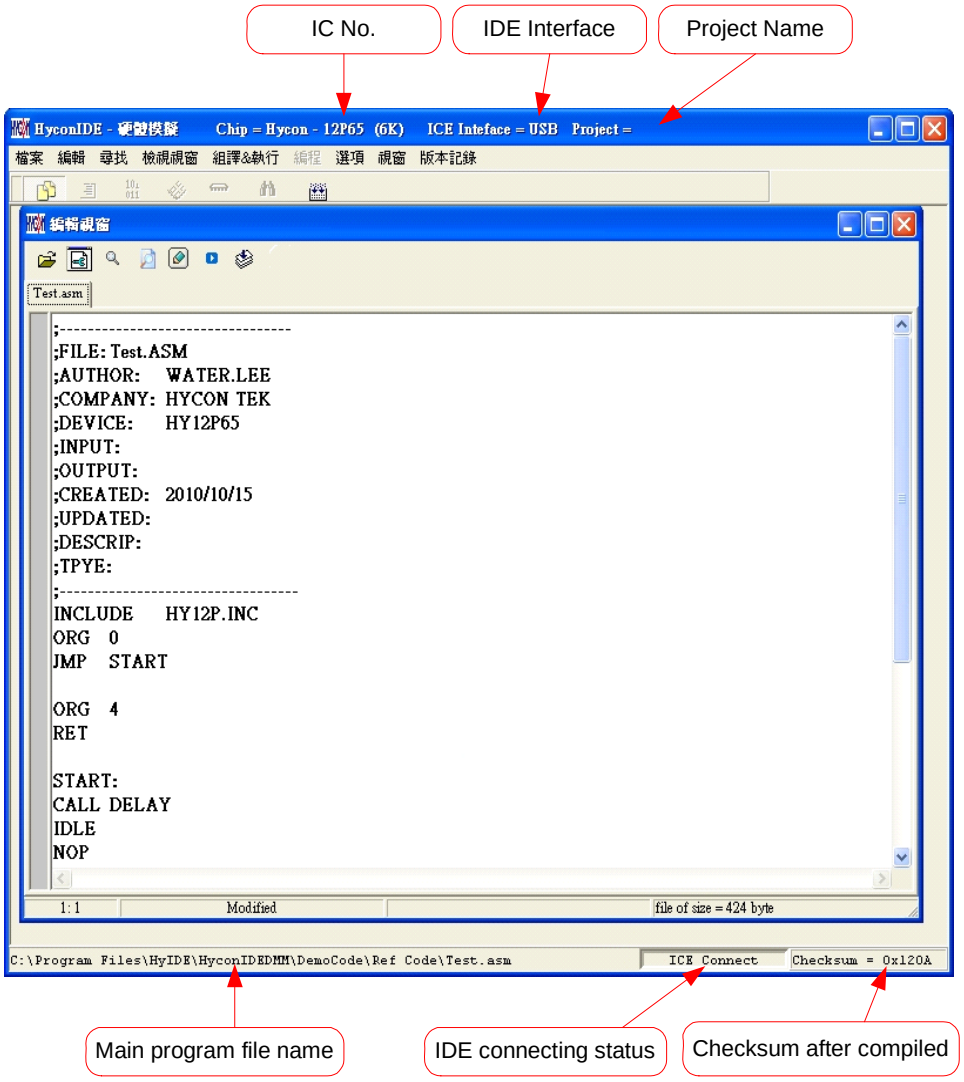

Figure 10

Edit Window

- Open file

  Open the existing edited file in the disk
- Set bookmark

  Using this function to go back to the bookmark instantly when many files were opened
- Go to bookmark

  Jump to the default bookmark
- Find string

  Find input string
- Find next string
- Go to page

  Using this function to switch files
- Assemble

  Only acting assemble function not debug status. After assembled, a message window will show up

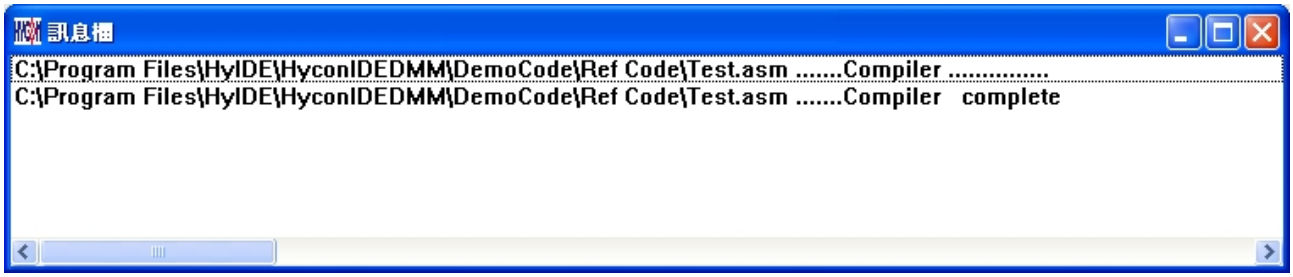

© 2012 HYCON Technology Corp

File

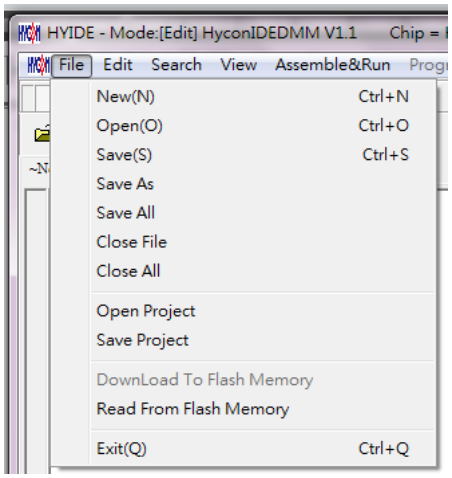

Figure 11

- Open Project → Project includes, IC No., IDE interface, main program file name, current status and checksum. The project status will be loaded once this function is activated.

Edit

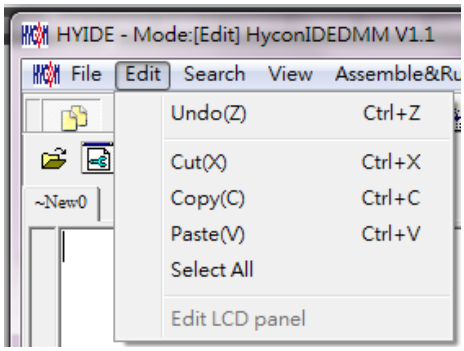

Figure 12

View

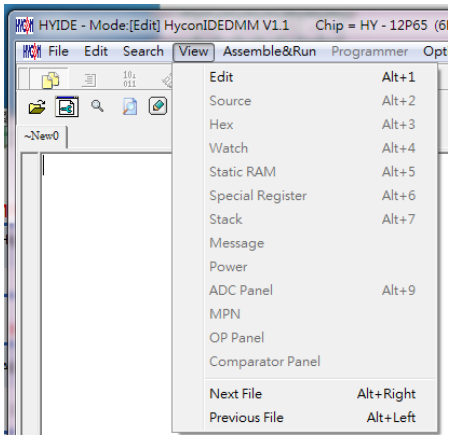

Figure 13

Assemble & Run

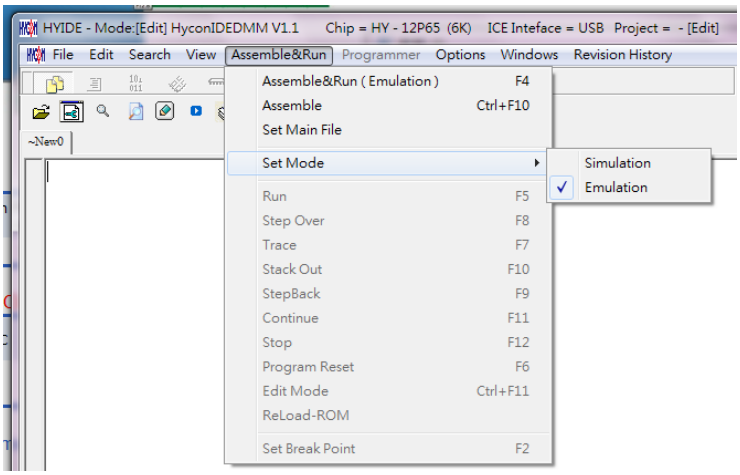

Figure 14

- Assemble & Run (Emulation) → Assemble Source Code and execute debug mode
- Assemble → Only executing assemble, not debugging. Error message will show up when the lines is error. It is usually used in generating OBJ Code (Object).
- Set Main File → Set the file as assembly main file. Files will be named after compiler generated file name, such as Hex, MAP, ASC…etc.
- Set Mode (Debug mode) → Debug through software or hardware is selective.

Interface Setup

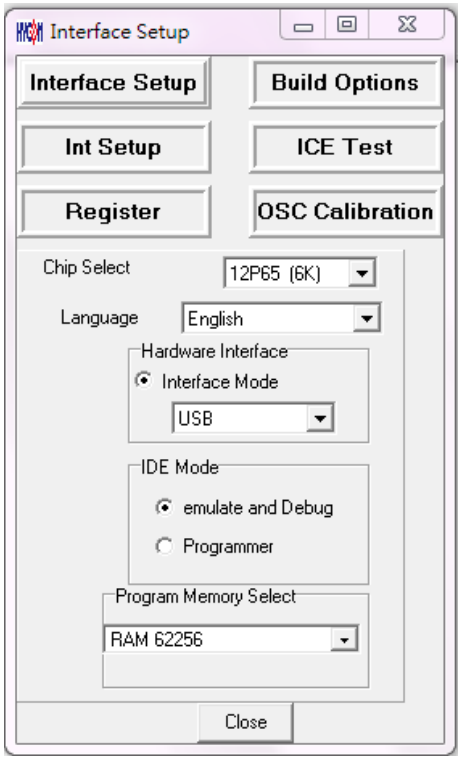

Figure 15

- **Interface Setup**

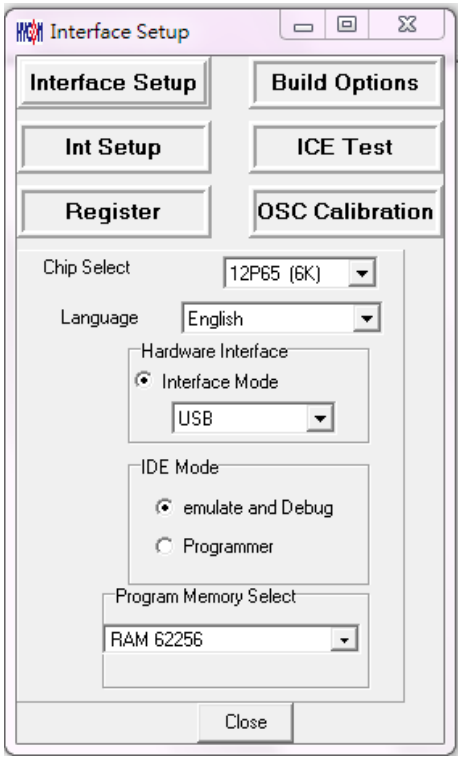

Figure 16

- Chip Select: Select IC part no. Compiler will assemble the selected part no.'s program file. It will determine whether there is any misuse or non-existing Register or SRAM, or has the program exceeded the ROM Size.
- Language option: English and Chinese interface are selectable.
- Communication interface option: Select IDE communication interface.
- Mode option: Two choices, Emulate and debug, and programmer.

© 2012 HYCON Technology Corp

- **Build Option**

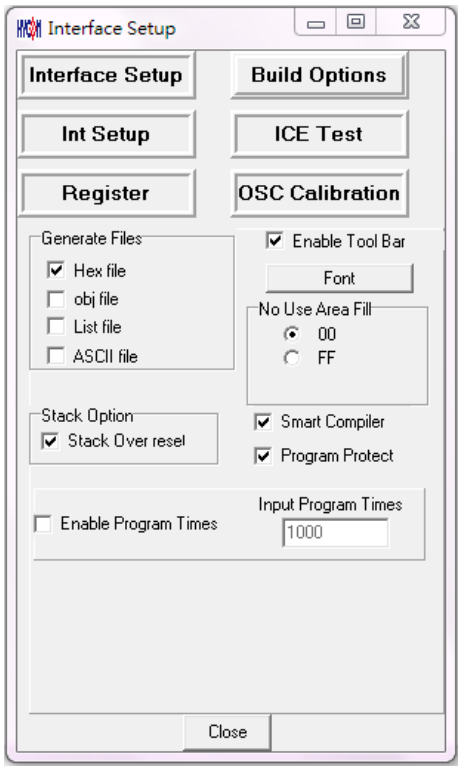

Figure 17

- Assembler generated extension: it is selectable to produce below file formats.

  1. Binary file : Hex
  2. Obj file : obj
  3. List file: lst
  4. ADCII file: asc

- Font option: Choose editor's fonts.
- Fill unused zone: Fill the unused zone with 0x0000 or 0xFFFF in the program.
- Simplified assemble: Simplified assemble function is selectable. When JMP or CALL is smaller than 2K, it will automatically transform to RJ or RCALL. If the arguments of CALL are set, it will not transform to RCALL.
- Program protection: Please refer to "Interface Setup" under Programming Window chapter.

© 2012 HYCON Technology Corp

- **Interrupt Setup**

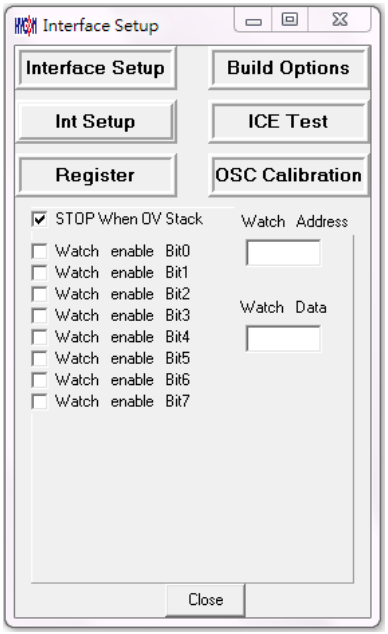

Figure 18

- Stop operation when Stack overflow: IDE will stop when Stack overflow.
- Monitor address: Select the monitored Register or RAM. The program will stop when the program executed RAM or Register value equals to the monitored Data.
- Monitor Data: Monitor value is set when the monitor Data is filled up.
- Monitor RAM bit: Monitor function will be activated if the monitor bit is ticked. The program will stop when the bit of Data value equals to the marked on bit.

- **ICE Test**

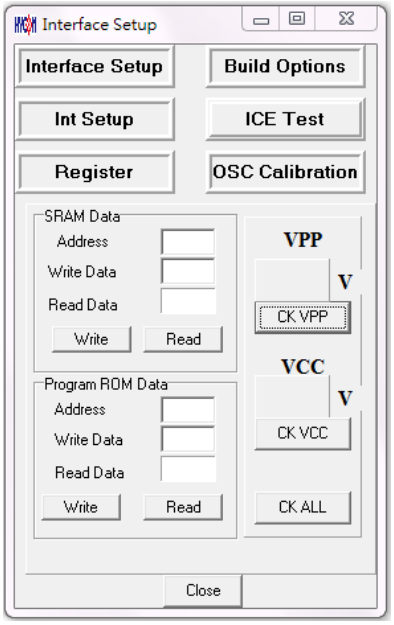

Figure 19

Windows

The window can be displayed horizontally or vertically.

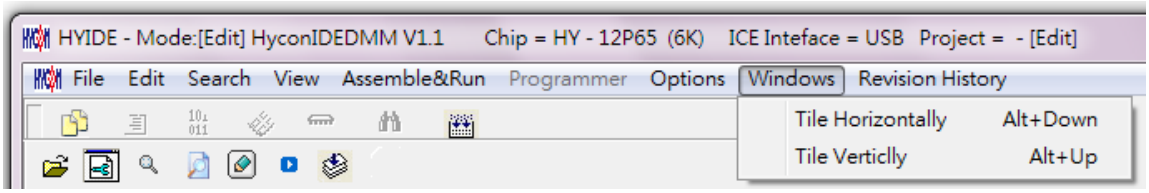
HYIDE - Mode:[Edit] HyconIDEDMM V1.1 Chip = HY - 12P65 (6K) ICE Inteface = USB Project = - [Edit]
File Edit Search View Assemble&Run Programmer Options Windows Revision History
Tile Horizontally Alt+Down
Tile Verticlly Alt+Up

Figure 20

Program Structure

Before editing new program, user must select IC part number through interface setup;

Different IC will have different Instruction Set, according to IC part number definition; it is classified as H08A and H08B instruction set;

User can refer to the appendix software demo code, Chapter 1.6 gives illustration of demo code usage. Users can refer to following program structure to start writing program. Basic structure description is listed as below:

- Program Name Definition as: ***.ASM
- Register Name or RAM Definition as: ***.INC
- Two program contectents are listed below:
  - “Test.asm” & “H08.inc”

- “Main.asm” structure:

```
Include    H12P.inc          ; Special register names and address definition of HY12P series
ORG        00H               ; Declare program start
JMP        START             ; Jump to main program

ORG        04H               ; Declare interrupt flag address
NOP                          ; Interrupt program
RET

START:                       ; Start Main program. Label name definition can be any word
CALL       DELAY
IDLE
NOP

DELAY:
.
.
.
RET
END                          ; End Program
```

- Reference Document:

  IP User Manual: User’s Guide

  Instruction Set User Manual: H08A Instruction Set Manual

  HYCON-IDE Complier User Manual: HY-MCU COMPILER

Self-defined Instruction

- HYCON-IDE for DMM includes user self-defined instruction function This function provides user to self-define HY12P series instruction as their familiar MCU instructions.

© 2012 HYCON Technology Corp

- Usage description：
  1. All self-defined instruction function is installed under: Inst.txt file. It is separated into two rows. The first instruction (first row) of every row is HYCON origin instruction name; users cannot make amendment to it. The second instruction (second row) is "User" self-defined instruction name.
  2. First and second instruction can only be separated by space, multi-space or Tab.
  3. Second instruction can be followed by semicolon (;) as remark.
  4. Second instruction name can be the same as the first one.
  5. The name of second instruction cannot be defined as any of HYCON origin instruction name except the instruction in the same row. Otherwise, it is deemed as invalid and will adopt the origin instruction name to compile program.
  6. After users self-define the second instruction name, the first or second instruction name can be used when program compiling.
  7. Every row can only has one self-defined instruction name, any repeated instruction name will be deemed as invalid.
- For example：

  JMP JUMP JMM JPP JU ;╳wrong definition way

  JMP JUMP
- Repeated defined instruction or self-define instruction will be deemed as invalid.

  Example:

  JMP JUMP

  JMP JPP ;╳ instruction name redefine. JUMP will be deemed as invalid instruction, only JPP is valid.

  JPP JU ;╳ cannot use self-defined name to redefine

  JMP JN ;╳ cannot be defined as HYCON origin existed instruction name

  Correct definition is:

  JMP JUMP

© 2012 HYCON Technology Corp

3. HYCON-IDE Debug Interface

It can be classified into hardware debug and software debug.

- Hardware debug

  The indication column is blue

- Software debug

  The indication column is green

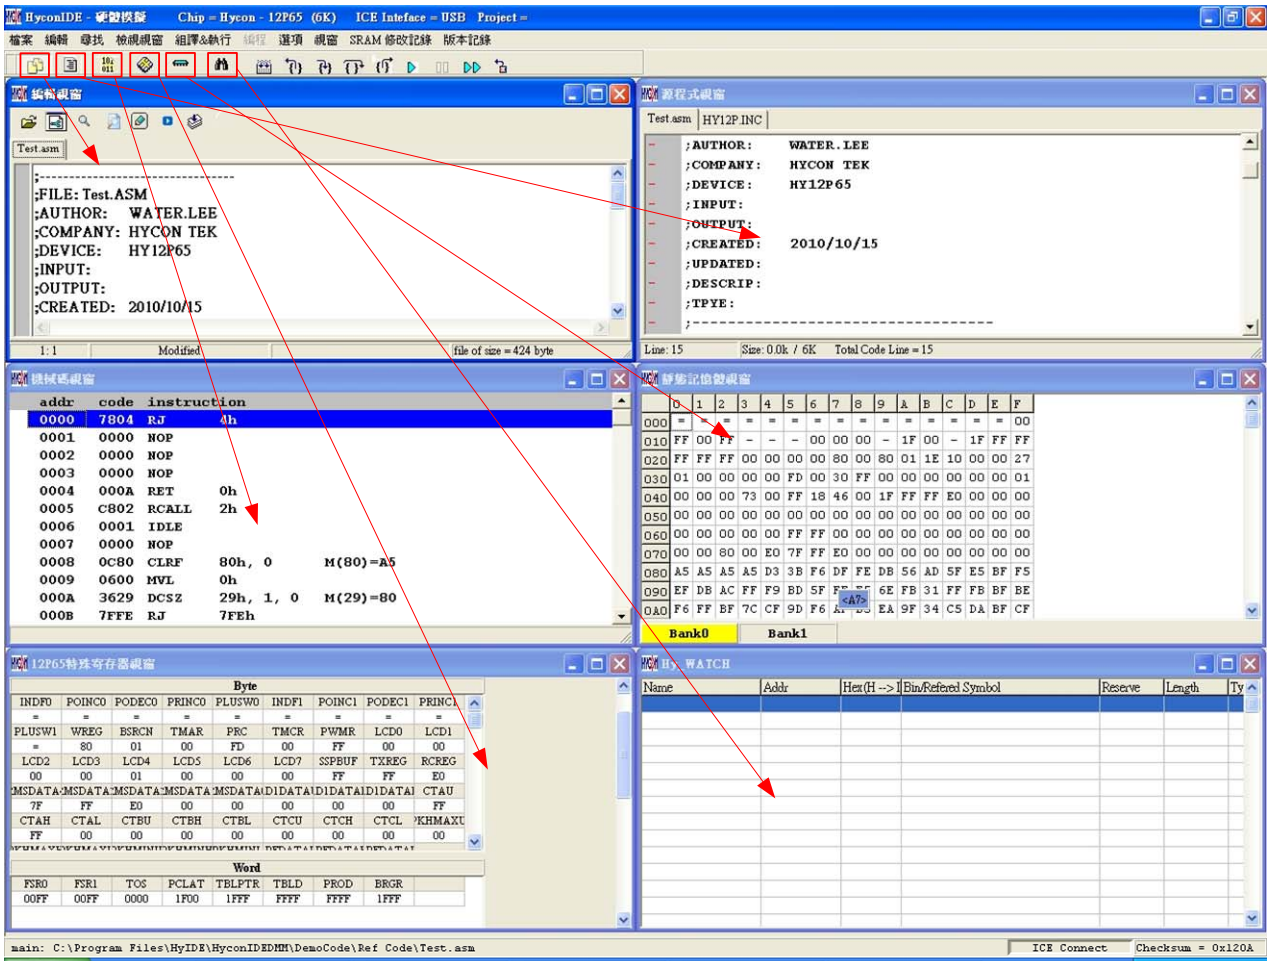

3.1 Fast Execution



- **Fast window switch**

(1) Switch to Edit window

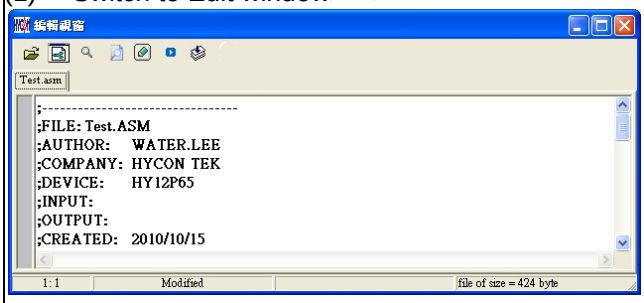

(2) Switch to Source window

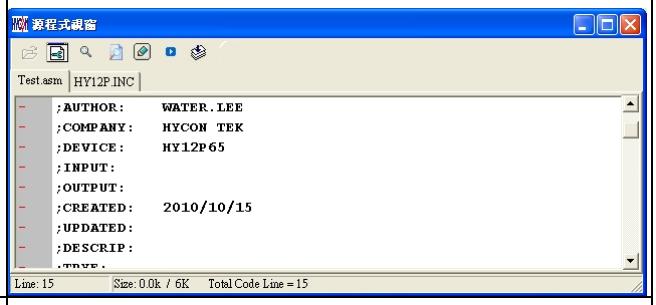

(3) Switch to Hex window

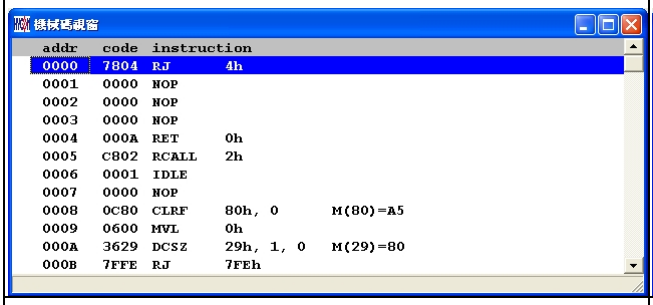

(4) Switch to Ram window

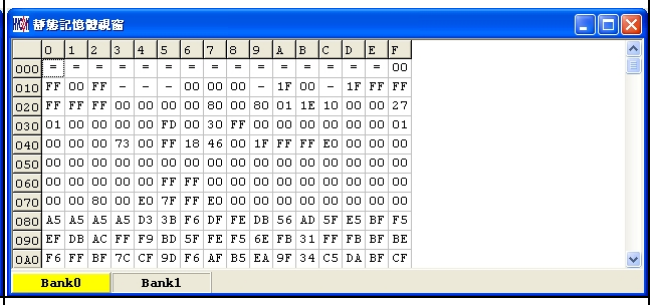

(5) Switch to Reg window

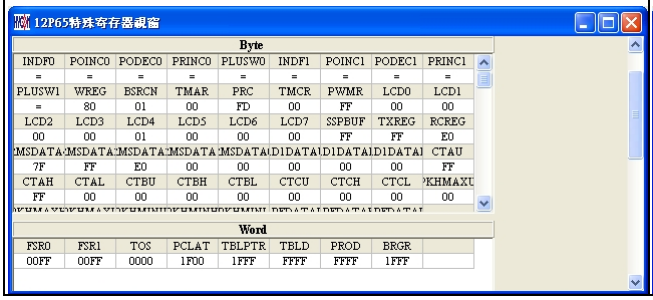

(6) Switch to Watch window

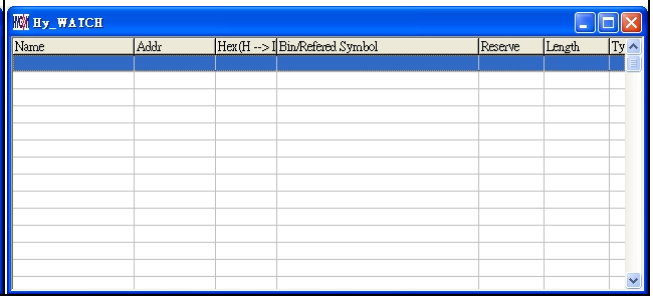

© 2012 HYCON Technology Corp

- **Fast Debug**

(1) Step back

(2) Trace (Enter into Macro/vice program)

(3) Step over (Not enter into Macro/vice program)

(4) Skip Call

(5) Execute (Free RUN)

(6) Pause

(7) Continue

(8) Program replace

(9) Back to edit mode

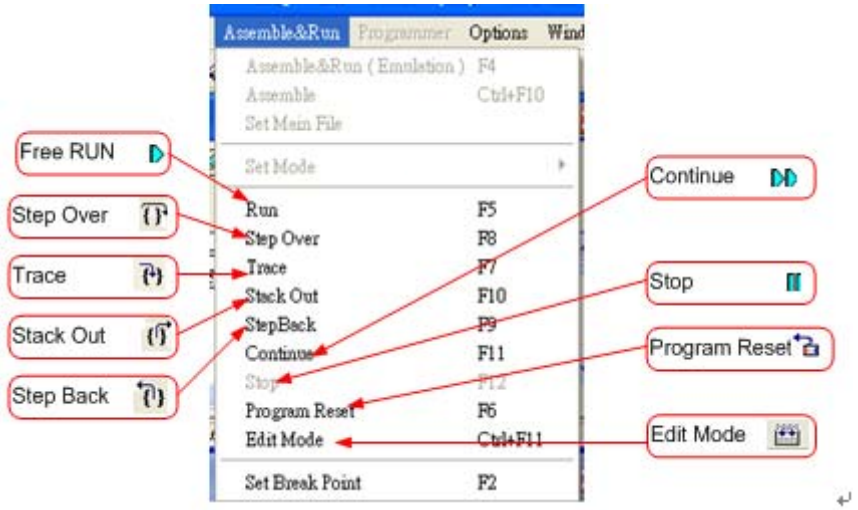

Figure 21

- **Two methods to set or remove interrupt:**

1. Use mouse to select interrupt place in program code window or machine code window, press “F2” button to set to remove interrupt.
2. Use mouse to select interrupt place in program code window or machine code window, double click the left key to set or remove interrupt.

© 2012 HYCON Technology Corp

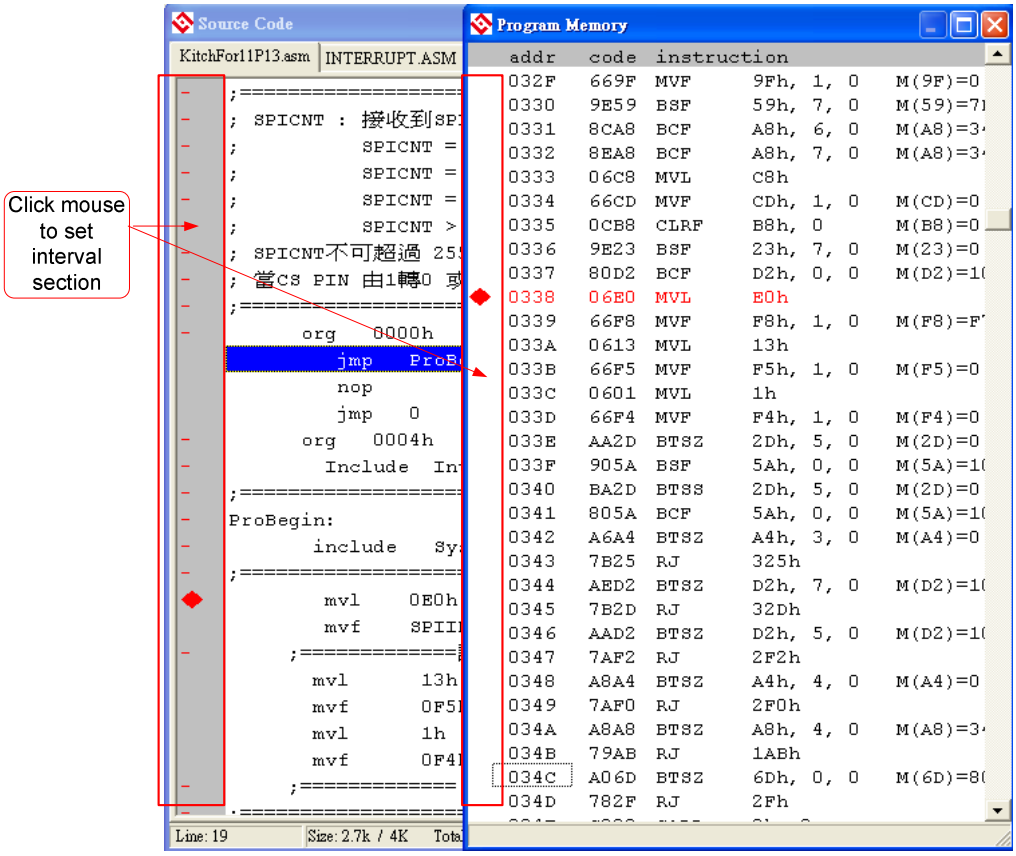
Click mouse to set interval section
Source Code
KitchFor11P13.asm
INTERRUPT.ASM
Program Memory
addr code instruction
Line: 19
Size: 2.7k / 4K

Figure 22

3.2 RAM Window

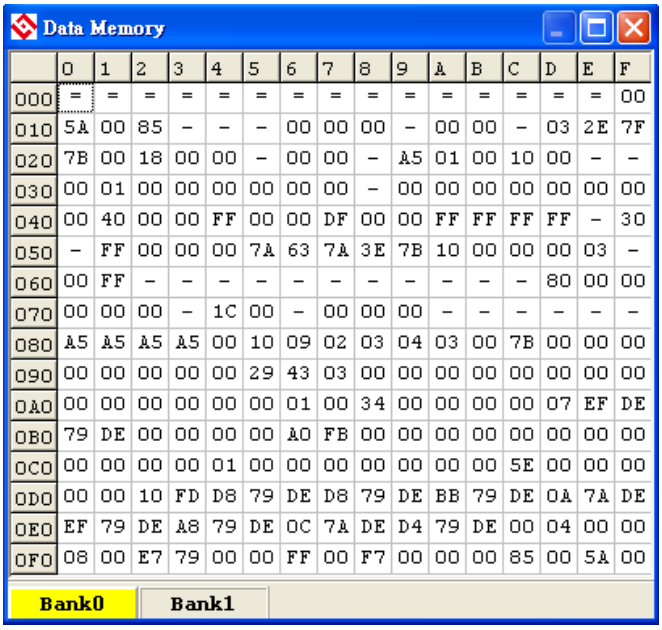

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
000	=	=	=	=	=	=	=	=	=	=	=	=	=	=	=	00
010	5A	00	85	-	-	-	00	00	00	-	00	00	-	03	2E	7F
020	7B	00	18	00	00	-	00	00	-	A5	01	00	10	00	-	-
030	00	01	00	00	00	00	00	00	-	00	00	00	00	00	00	00
040	00	40	00	00	FF	00	00	DF	00	00	FF	FF	FF	FF	-	30
050	-	FF	00	00	00	7A	63	7A	3E	7B	10	00	00	00	03	-
060	00	FF	-	-	-	-	-	-	-	-	-	-	-	80	00	00
070	00	00	00	-	1C	00	-	00	00	00	-	-	-	-	-	-
080	A5	A5	A5	A5	00	10	09	02	03	04	03	00	7B	00	00	00
090	00	00	00	00	00	29	43	03	00	00	00	00	00	00	00	00
0A0	00	00	00	00	00	00	01	00	34	00	00	00	00	07	EF	DE
0B0	79	DE	00	00	00	00	A0	FB	00	00	00	00	00	00	00	00
0C0	00	00	00	00	01	00	00	00	00	00	00	00	5E	00	00	00
0D0	00	00	10	FD	D8	79	DE	D8	79	DE	BB	79	DE	0A	7A	DE
0E0	EF	79	DE	A8	79	DE	0C	7A	DE	D4	79	DE	00	04	00	00
0F0	08	00	E7	79	00	00	FF	00	F7	00	00	00	85	00	5A	00

Figure 23

- After opening RAM window, Bank will show the volume of the selected IC. Every Bank has 256 byte.
- Bank0 starts from 0x00 to 0xFF. Bank1 starts from 0x100 to 0x1FF…etc.
- If the address does not exist, it will display "-".
- If users intend to switch Bank display, use cursor to point to the desired Bank zone, and then click the left key of the mouse to confirm.
- If Hint is set, the address will display numbers and will be underlined.
- **Notice: The Address 0x00 ~ 0x0Eof Bank0 is indirect addressing register, it cannot be revised directly, the displayed value is not referable. If revise is required, please refer to Chapter 3.3. Revise indirect addressing Data or Address.**

- **Function Display**

  Click the mouse selection key (right key)

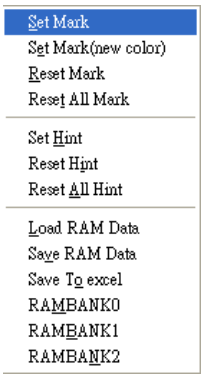

Figure 24

- Set Mark
- Set Mark(new color)

- Reset Mark
- Reset All Mark
- Set Hint
- Reset Hint
- Reset All Hint
- Load RAM Data
- Save RAM Data
- Save To excel
- RAMBANK0

- Hint

  Use DS defined SRAM; Hint will be automatically generated in corresponding window address.

  When cursor point to the address, it will show the defined string.

  Ex: Program definition SRAM

```
MEMAR       080h
MD1         DS      1
MD2         DS      1
MD3         DS      1
MDL1        DS      1
MDL2        DS      1
MDL3        DS      1
MD4         DS      5
S_REG       DS      1
r_Len       DS      1
SQRTmp      DS      4
Temp        DS      16
```

After assembling, it will enter into debug status, displaying memory window.

When cursor points to 80h address, <80>:MD1 will be shown.

When cursor points to 86h address, <86>:MD4[0] will show up.

When cursor points to 87h address, <87>:MD4[1] will show up.

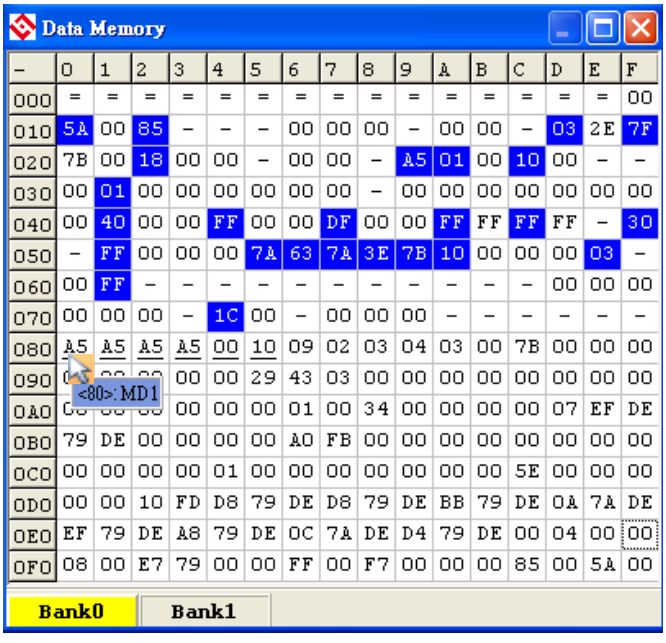

Figure 25

- **There are two ways to revise SRAM value**
  1. Point the cursor to the selected revised lines, click mouse's left key and Key IN directly.
  2. Point the cursor to the selected revised lines, double click the mouse's left key, a window will pop up as Figure 27 shown. Users can key in on keyboard or press the button by mouse

Figure 26

3.3 Register Window

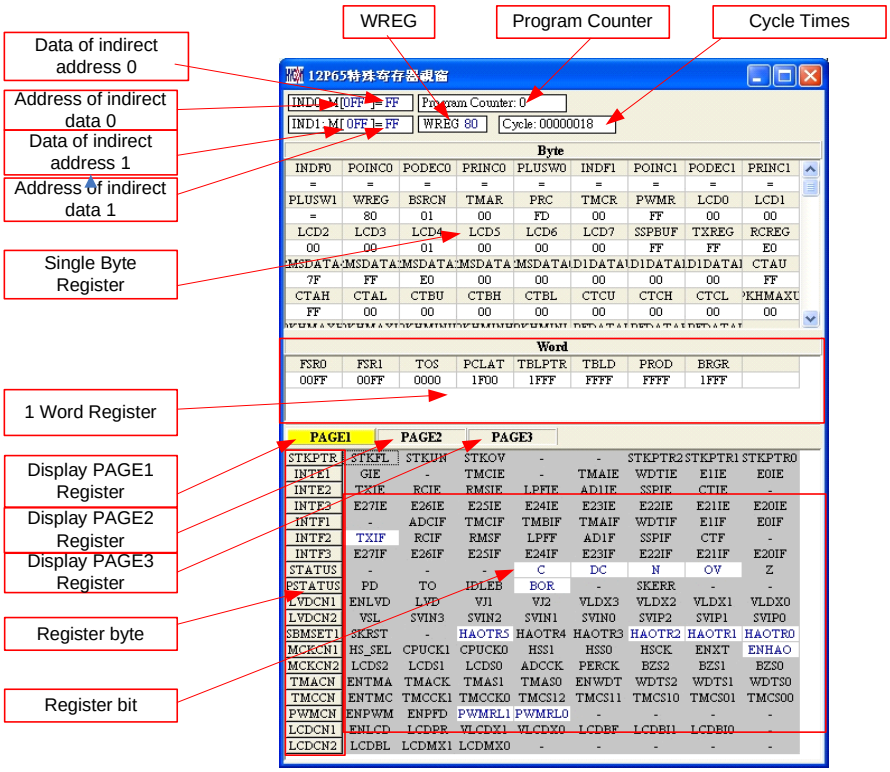

Figure 27

- Modify Indirect Data or Address

As Figure 28 configures, using keyboard to Key IN or using cursor to click data the Address can be modified.

Figure 28

As Figure 29 configures, using Key IN of the keyboard or using cursor to click data the Data can be modified.

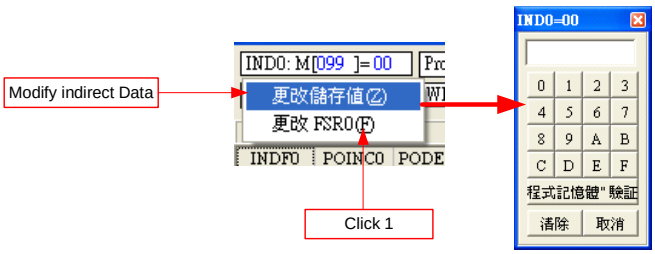

Figure 29

- Modify WREG Data

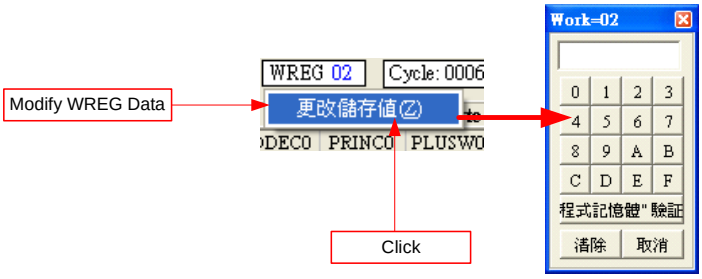

Figure 30

- Modify Data of single 1byte or Word Register

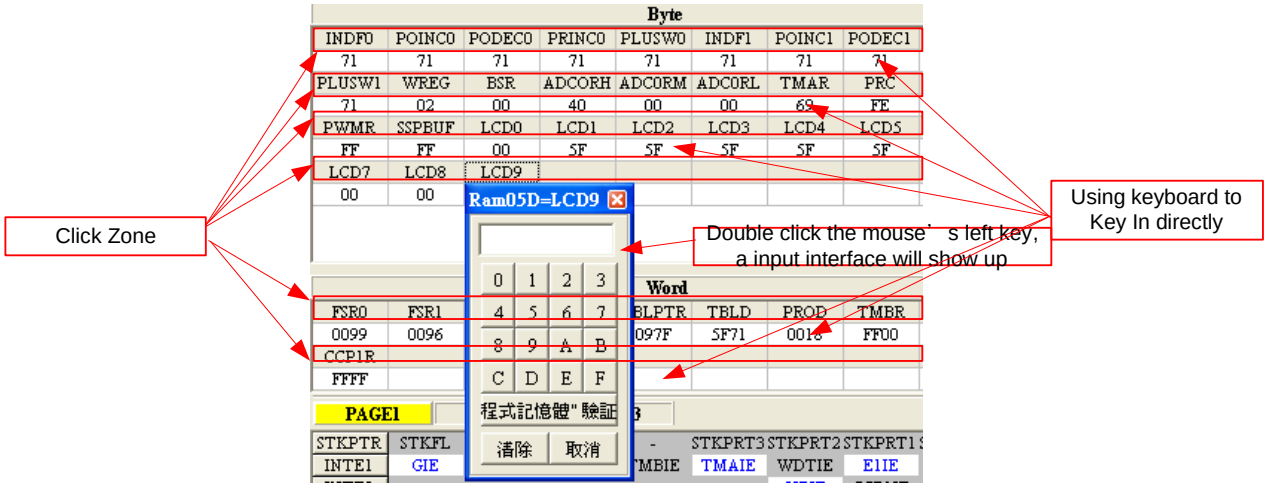

Figure 31

- Modify Register single 1 byte or single 1 bit

  After configuring Bit as 1, it will be highlighted in white, blue digit

  After configuring Bit as 0, it will be marked in black digit

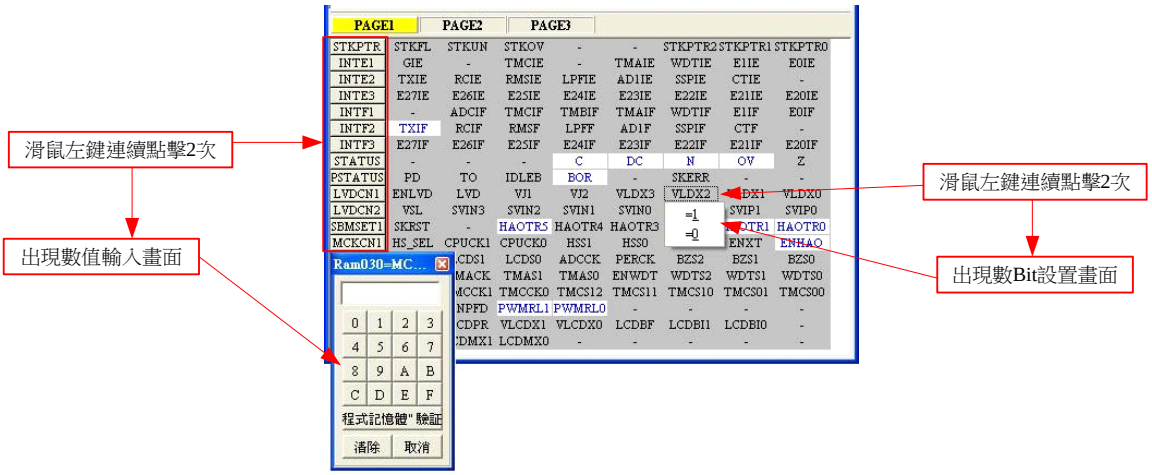

Figure 32

3.4 Watch Window

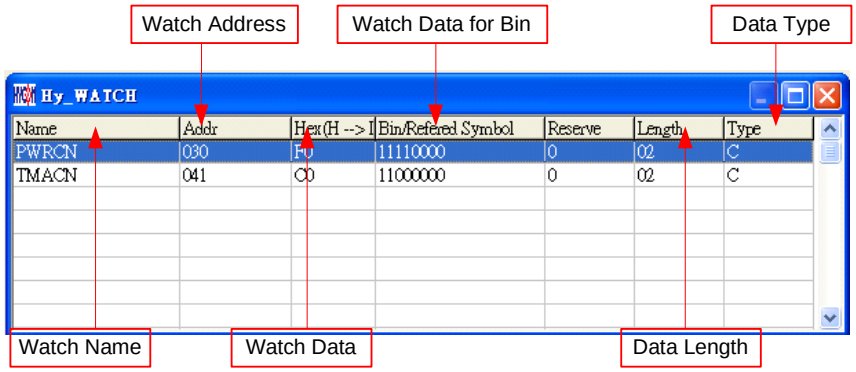

Figure 33

- Watch Name → Monitor Data name, program uses EQU or DS defined name
- Watch Address → Monitor Data Address
- Watch Data → Display value, can select display arrangement from right to left or from left to right or in decimal or hexadecimal system.

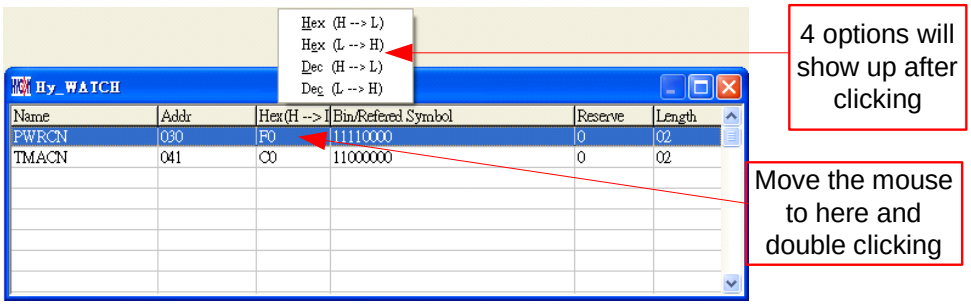

Figure 34

Hex (H → L): Hexadecimal display, address H/L from low to high

Hex (L → H): Hexadecimal display, address L/H from high to low

Dec (H → L): Decimal display, address H/L from low to high

Dec (L → H): Decimal display, address L/H from high to low

- Watch Data for Bin → Data display in decimal system, only show up when using EQU defined address
- Data Length → Data length, display DS definition length; it will display 2 when using EQU definition
- Data Type → D = DS definition; C = EQU definition

- Monitor EQU defined Register or RAM, click right key of the mouse and select the register or RAM to be monitored, as shown in Figure 35.

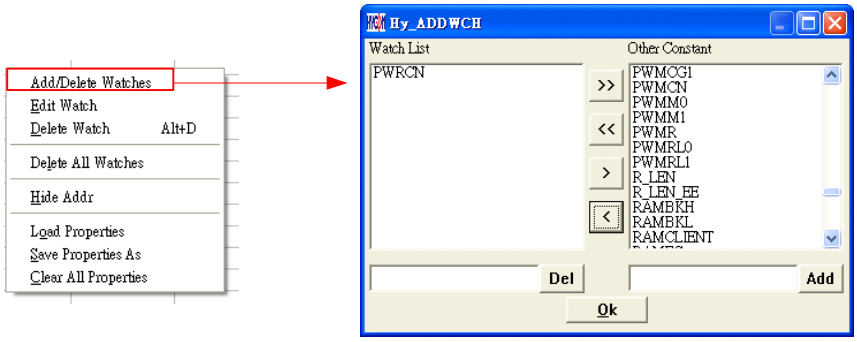

Figure 35

3.5 Stack Window

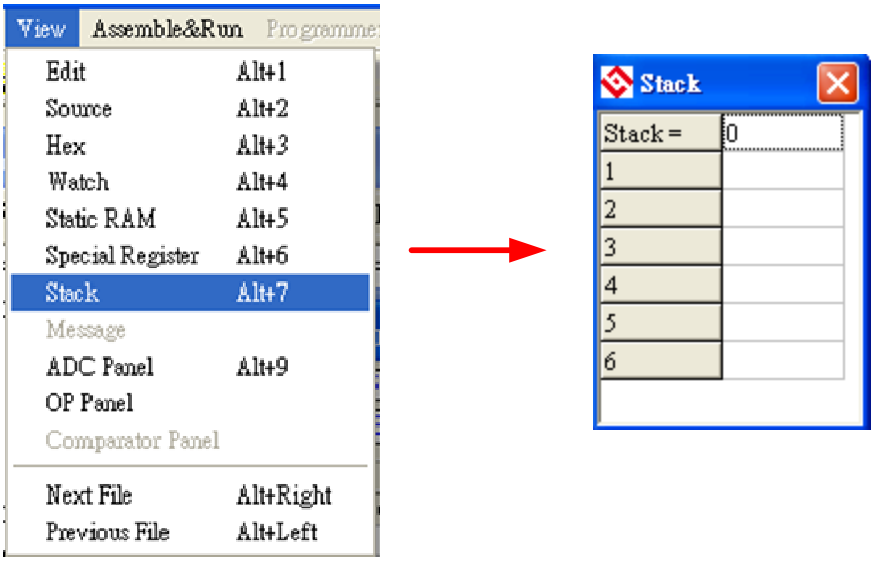

Figure 36

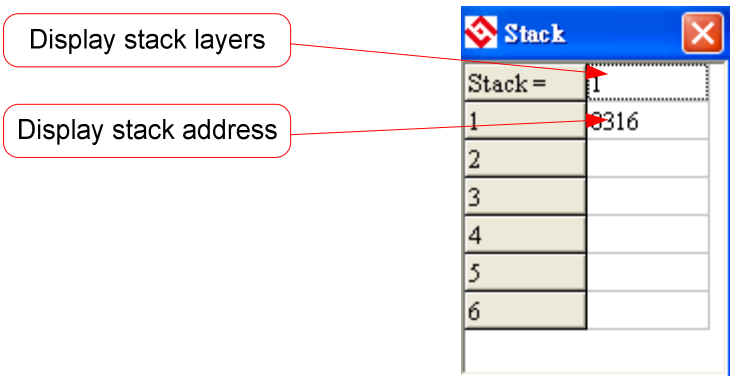

Figure 37

3.6 ADC Window

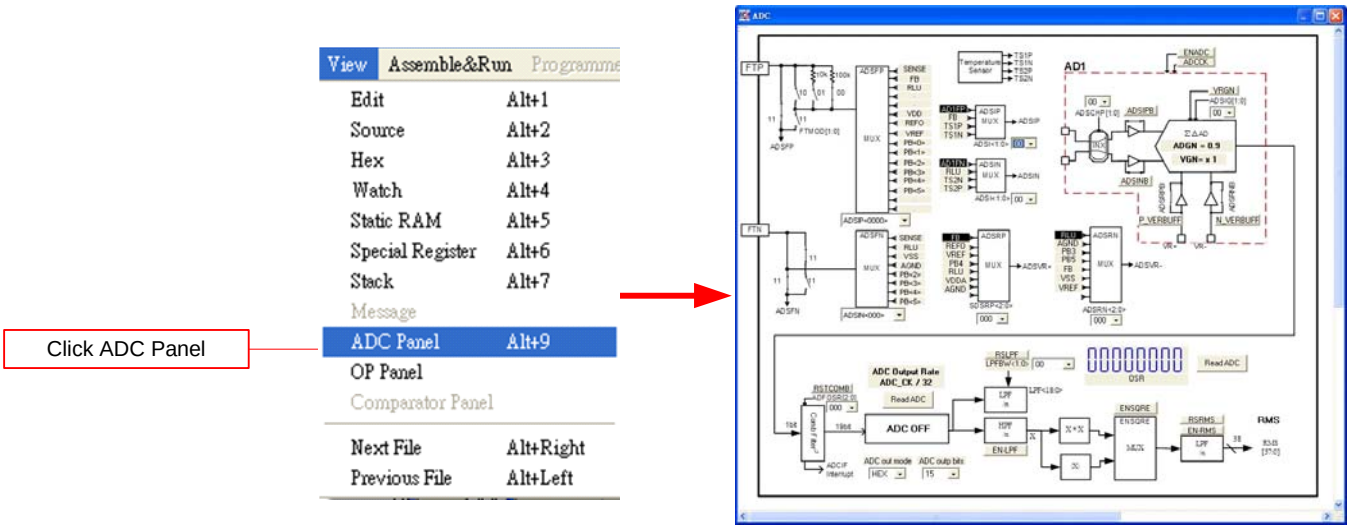

Figure 38

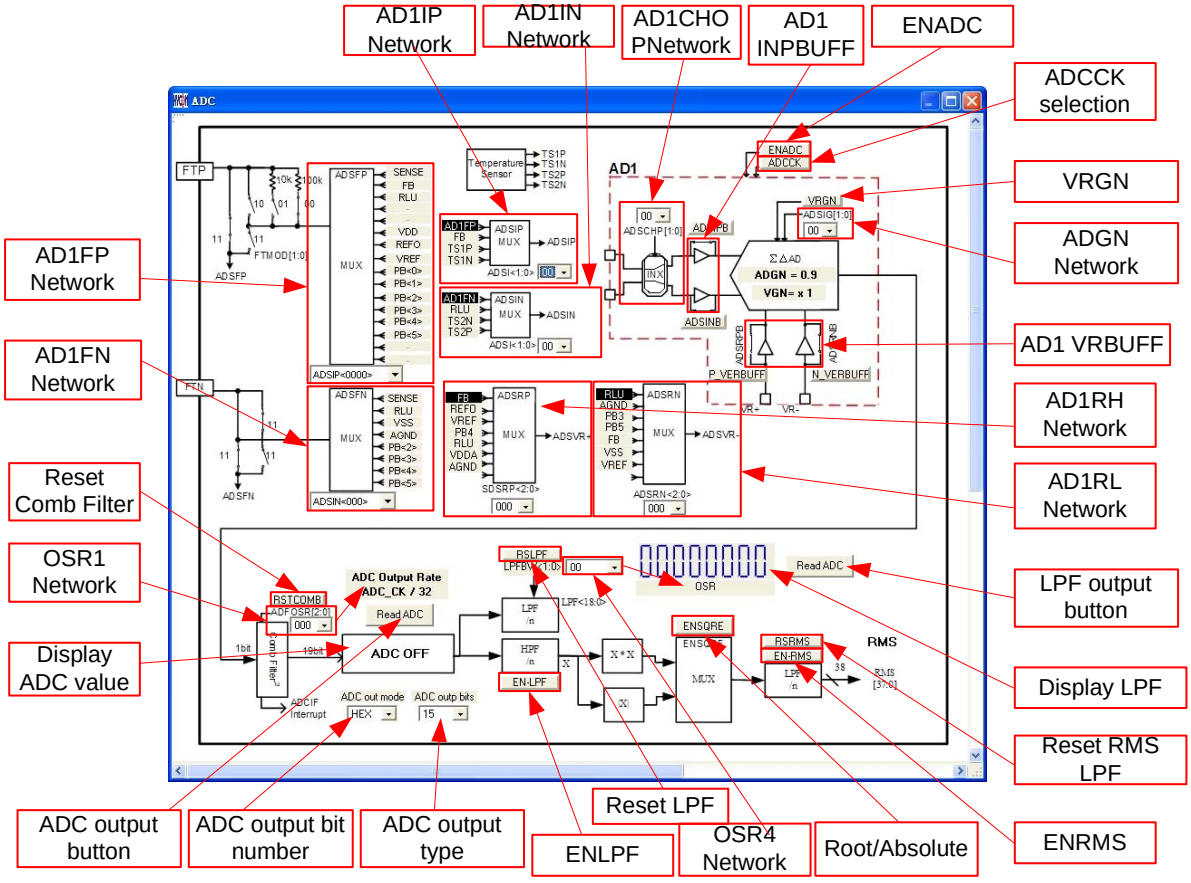

Figure 39

- AD1IP Network (ADSIP)
  (1) Click the network name, then AD1IP can go to the specified network
  (2) Click it and Figure 40 will be displayed

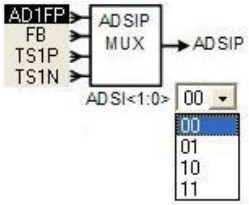

Figure 40

- AD1IN Network (ADSIN)
  (1) Click the network name, then AD1IN can go to the specified network
  (2) Click it and Figure 41 will be displayed

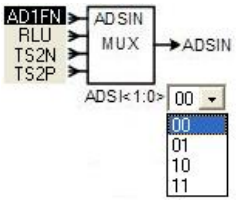

Figure 41

- AD1FP Network (ADSFP)
  (1) Click the network name, then AD1FP can go to the specified network
  (2) Click it and Figure 42 will be displayed

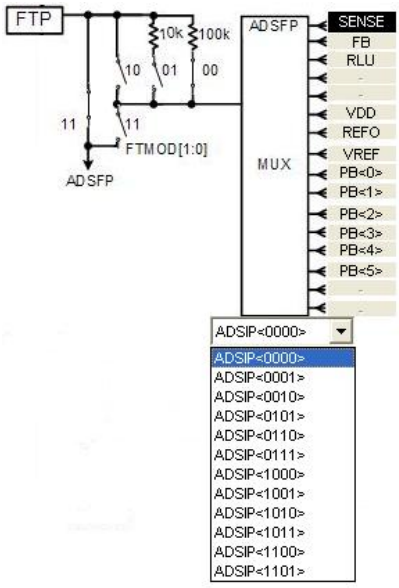

Figure 42

- AD1FN Network (ADSFN)
  (1) Click the network name, then AD1FN can go to the specified network
  (2) Click it and Figure 43 will be displayed

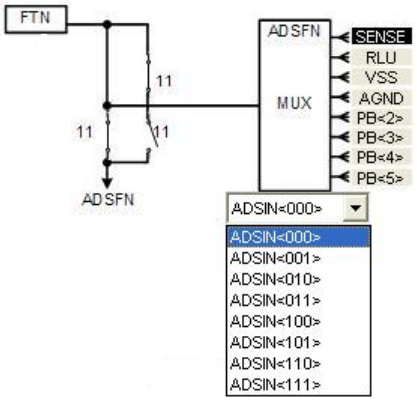

Figure 43

- AD1CHOP Network switch (ADSCHP)

  (1) Network is switchable by clicking, 3 types are selective

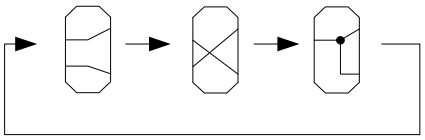

  (2) Figure 44 will show up by clicking, then users can select the switch network

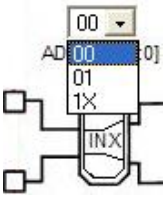

Figure 44

- AD1 INPBUFF switch

  (1) Click the specified network name, ADSIPB/ADSINB switch will be ON/OFF

  (2) Click the specified network switch, ADSIPB/ADSINB switch will be ON/OFF

- ADCCK option

  Click the specified network name, ADCCK will switch options. When ADCCK = OFF, HAO_OSC/10. When ADCCK = ON, HAO_OSC/20.

- ENADC

  Click the specified network name, ENADC will be ON/OFF. When ENADC = ON, ADC zone will display value

- AD1RH Network (ADSRP)

  (1) Click the specified network name, AD1RH can select to that network

  (2) Click the specified network switch , AD1RH can select to that network

  (3) Figure 45 will show up by clicking, then users can select the switch network

© 2012 HYCON Technology Corp

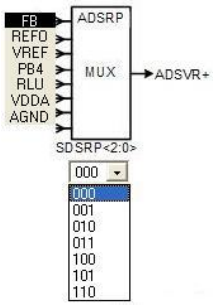

Figure 45

- AD1RN Network (ADSRN)

  (1) Click the specified network name, AD1RN can select to that network

  (2) Click the specified network switch, AD1RN can select to that network

  (3) Figure 46 will show up by clicking, then users can select the switch network

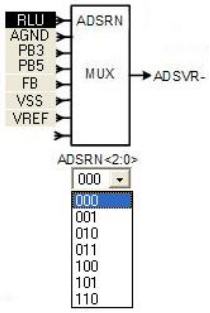

Figure 46

- AD1 VRBUFF Switch

  (1) Click the specified network name, P_VERBUFF/N_VERBUFF switch will be ON/OFF

  (2) Click the specified network switch, P_VERBUFF/N_VERBUFF switch will be ON/OFF

- ADGN Network

  Figure 47 will show up by clicking, then users can select the network

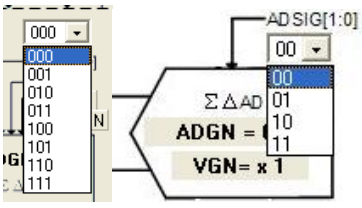

Figure 47

- VRGN

  Click the specified network name, VRGN can select to that network

- Reset Comb Filter

  Click the specified network name, RSTCOMB can select to that network. When RSTCOMB changed from OFF to ON, Comb Filter can be reset.

© 2012 HYCON Technology Corp

- OSR1 Network(ADFOSR)

  Figure 48 will show up by clicking, then users can select the network

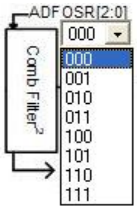

Figure 48

- ADC Display zone

  (1) Select ADC data output type → Hex or Dec output

  (2) Select ADC data output Bit → From 8 ~ 19 Bit output

  (3) Display output button → ADC output value will be displayed by clicking this button

- ENLPF

  Click the specified network name, ENLPF will be ON/OFF. When ENADC = ON, LPF zone will display value

- Reset LPF

  Click the specified network name, RSLPF can select to that network. When RSLPF changes from OFF to ON, LPF can de reset.

- OSR4 Network (LPFBW)

  Figure 49 will show up by clicking, then users can select the network

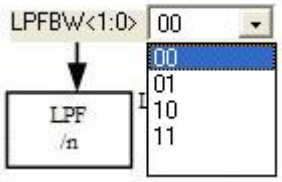

Figure 49

- ENSQUE

  Click the specified network name, ENSQUE will be ON/OFF. When ENSQUE = OFF,

$$RMS<37:0>=\sum\frac{X^2}{N}$$. When ENSQUE=ON, $$RMS<37:0>=\sum\frac{|X|}{N}$$.

- ENRMS

  Click the specified network name, ENRMS will be ON/OFF.ON/OFF. When ENADC = ON, RMS zone will display value.

- Reset RMS LPF

  Click the specified network name, RSRMS can select to that network. When RSRMS changes from OFF to ON, RMS LPF can be reset.

© 2012 HYCON Technology Corp

3.7 Power Window

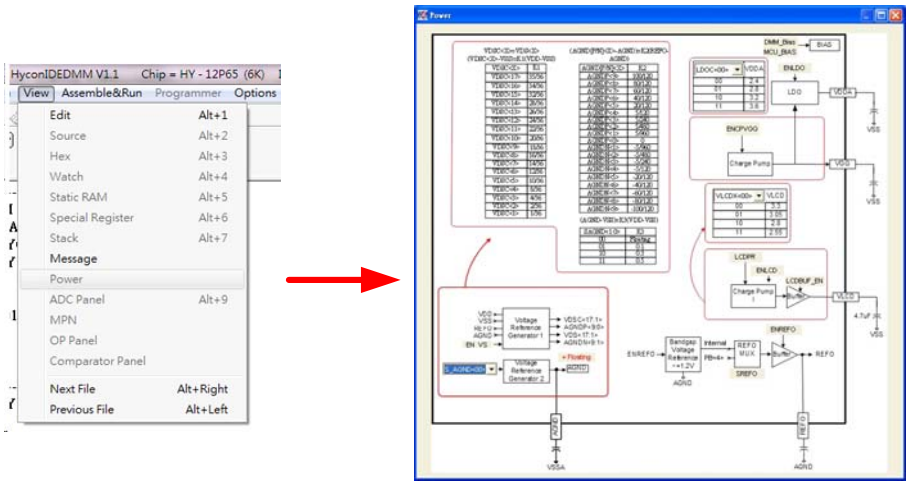

Figure 50

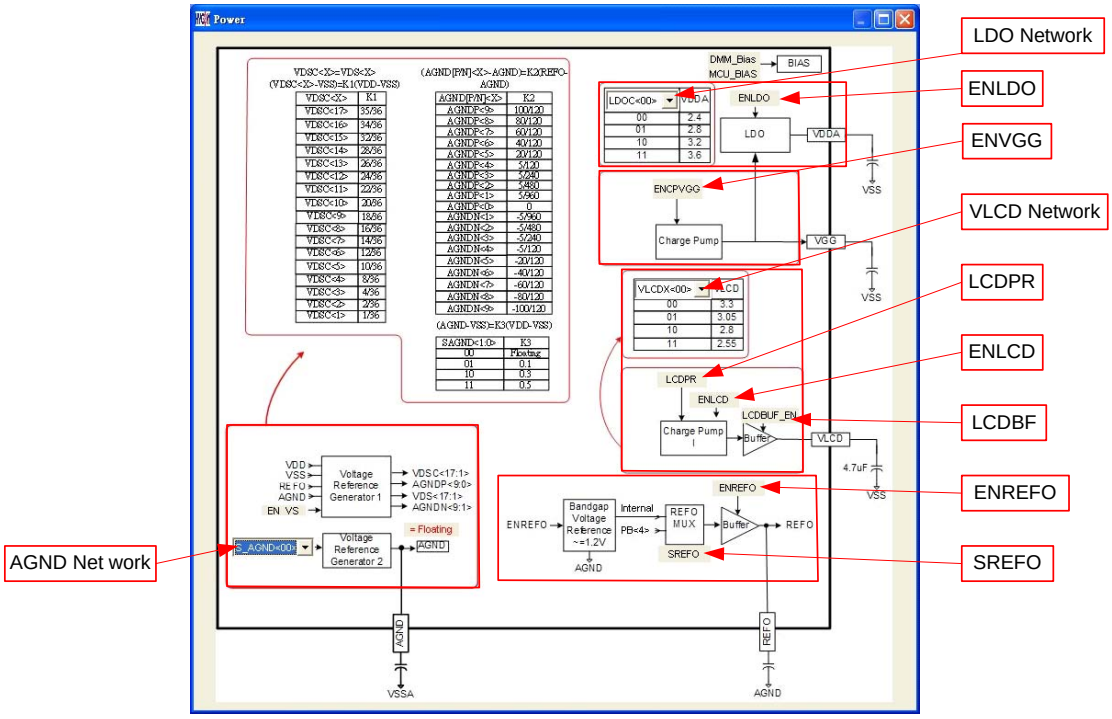

Figure 51

- ENLDO

  Click the specified network name, ENLDO will be ON/OFF. ENLDO display status, when ENLDO = 1, VDDA output voltage.

- LDO Network

  Figure 52 will show up by clicking, and then users can select the switch network

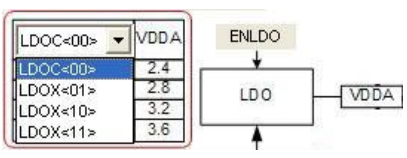

Figure 52

© 2012 HYCON Technology Corp

- ENVGG

  Click the specified network name, ENVGG will be ON/OFF. ENVGG display status, when ENVGG = 1, VGG output voltage

- ENLCD

  Click the specified network name, ENLCD will be ON/OFF. ENLCD display status, when ENLCD = 1, start LCD

- LCDPR

  Click the specified network name, LCDPR will be ON/OFF. LCDPR display status, when LCDPR= 1, VLCD power sauce is generated from internal IC.

  When LCDPR= 0, VLCD power sauce is generated from external input pin

- LCDBF

  Click the specified network name, LCDBF will be ON/OFF. LVDBF display status.

- VLCD Network

  Figure 53 will show up by clicking, and then users can select the switch network

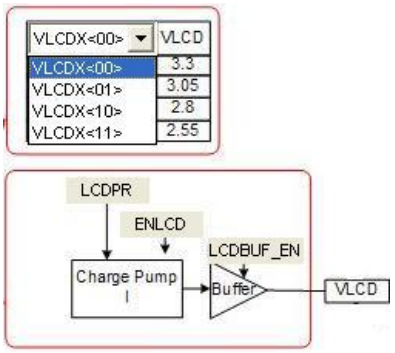

Figure 53

- ENREFO

  Click the specified network name, ENREFO will be ON/OFF. ENREFO display status, when ENREFO = 1, REFO output voltage

- SREFO

  Click the specified network name, SREFO will be ON/OFF, SREFO display status.

  When SREFO= 1, REFO power sauce is generated from internal IC.

  When SREFO= 0, REFO power sauce is generated from external PB< 4 > pin

- AGND Network

  Figure 54 will show up by clicking, and then users can select the switch network

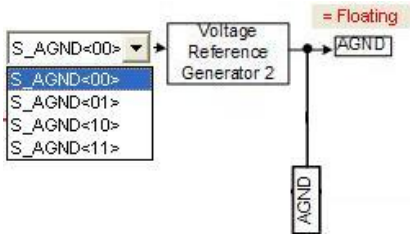

Figure 54

3.8 MPN Window

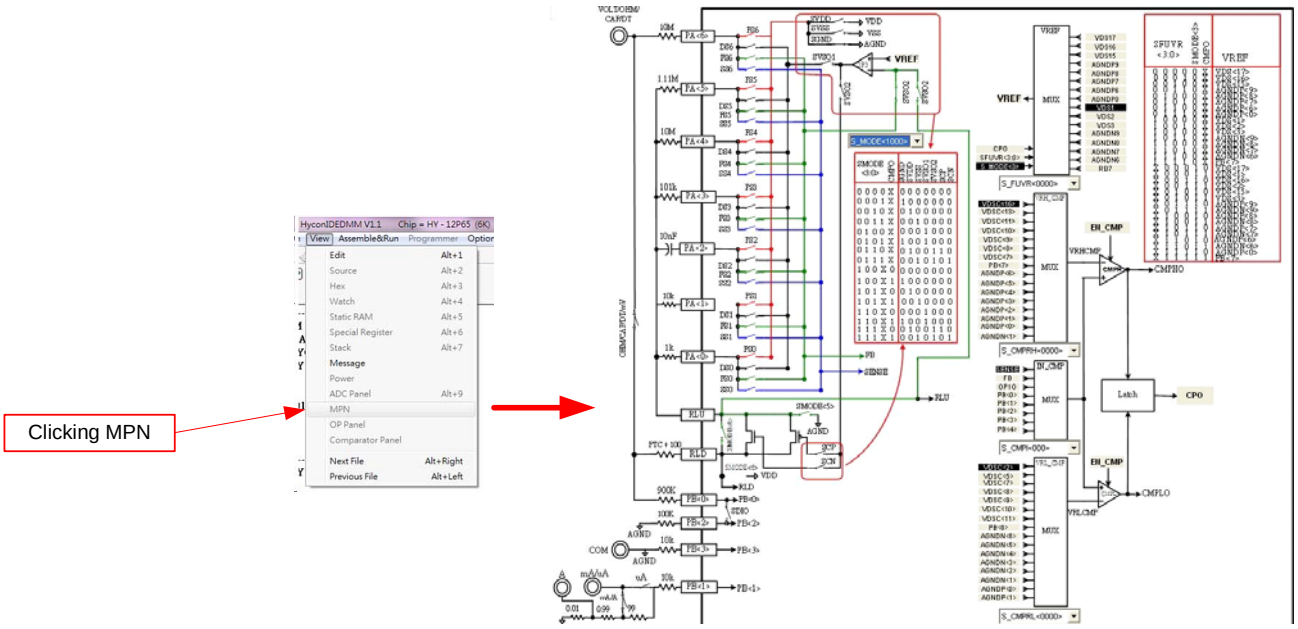

Figure 55

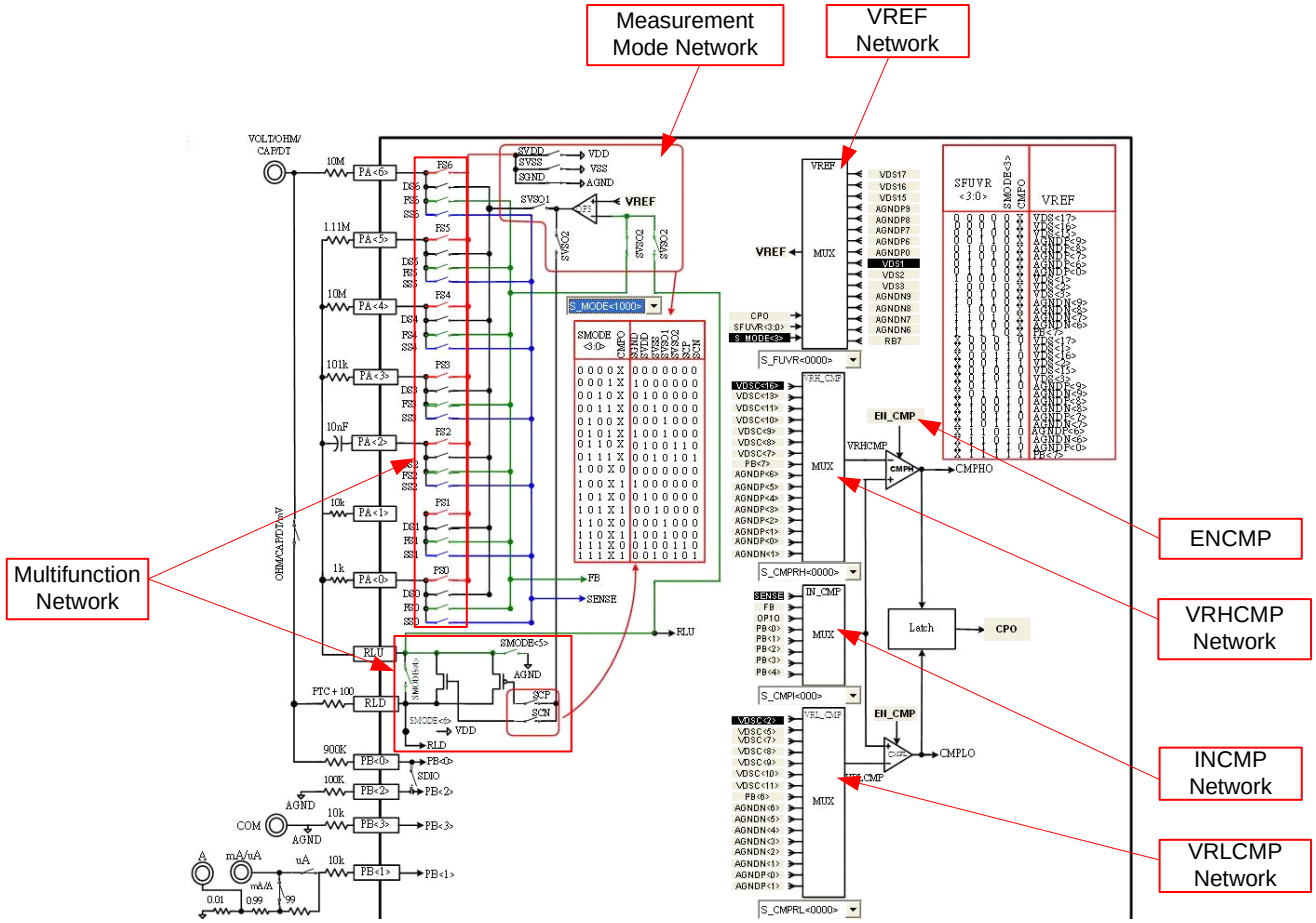

Figure 56

- ENCMP

  Click the specified network name, ENCMP will be ON/OFF, ENCMP display status.

- INCMP Network

  (1) Click the specified network name, INCMP can select to that network

  (2) Click the specified network switch, INCMP can select to that network

  (3) Figure 57 will show up by clicking, and then users can select the switch network

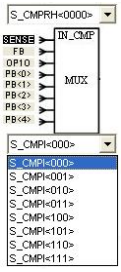

Figure 57

- VRHCMP Network

  (1) Click the specified network name, VRHCMP can select to that network

  (2) Click the specified network switch, VRHCMP can select to that network

(3)

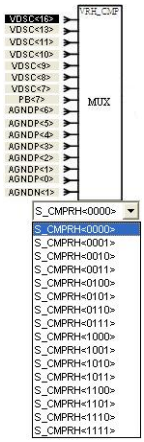

(4) Figure 58 will show up by clicking, and then users can select the switch network

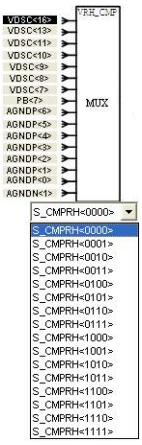

Figure 58

© 2012 HYCON Technology Corp

- VRLCMP Network
  - (1) Click the specified network name, VRLCMP can select to that network
  - (2) Click the specified network switch, VRLCMP can select to that network
  - (3) Figure 59 will show up by clicking, and then users can select the switch network

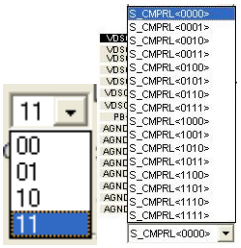

Figure 59

- VREF Network
  - (1) Click the specified network name, VREF can select to that network
  - (2) Click the specified network switch, VREF can select to that network
  - (3) Figure 60 will show up by clicking, and then users can select the switch network

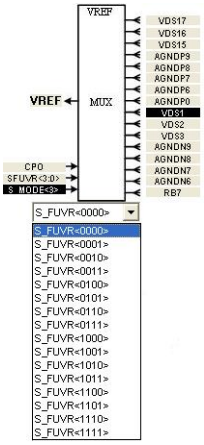

Figure 60

- Measurement Mode Network
  - (1) Click the specified network name, users can select to that network
  - (2) Click the specified network switch, users can select to that network
  - (3) Figure 61 will show up by clicking, and then users can select the switch network

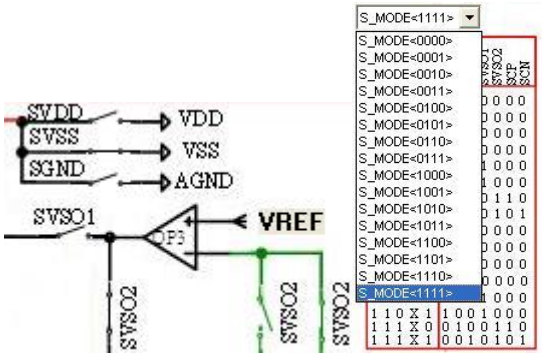

Figure 61

- Multi-function Network
  - (1) Click the specified network switch, users can select to that network
  - (2) Figure 62 will show up by clicking, and then users can select the switch network

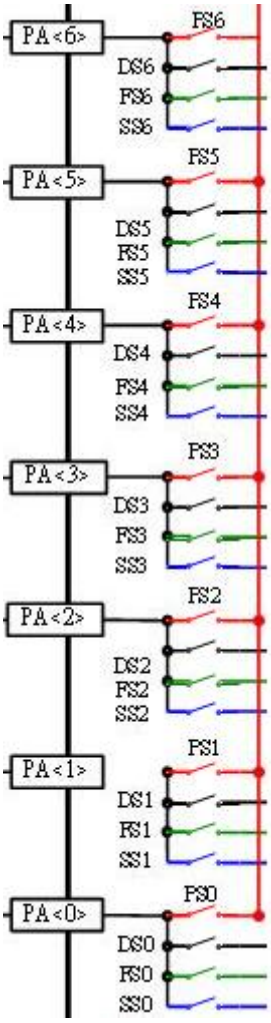

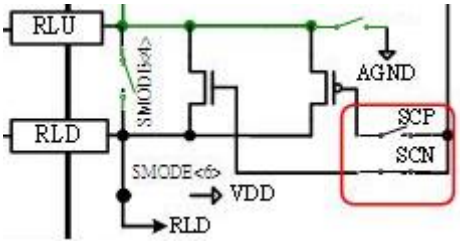

Figure 62

3.9 Register Record

If the register or SRAM has been revised manually after access to simulation window (hardware emulation or software simulation), the data will be recorded (no matter the RAM, Register, ADC, OP and CMP was revised by which window). The data will be revealed after pressing the button “SRAM record”. At this time, windows will suspend until it is closed to execute other commands.

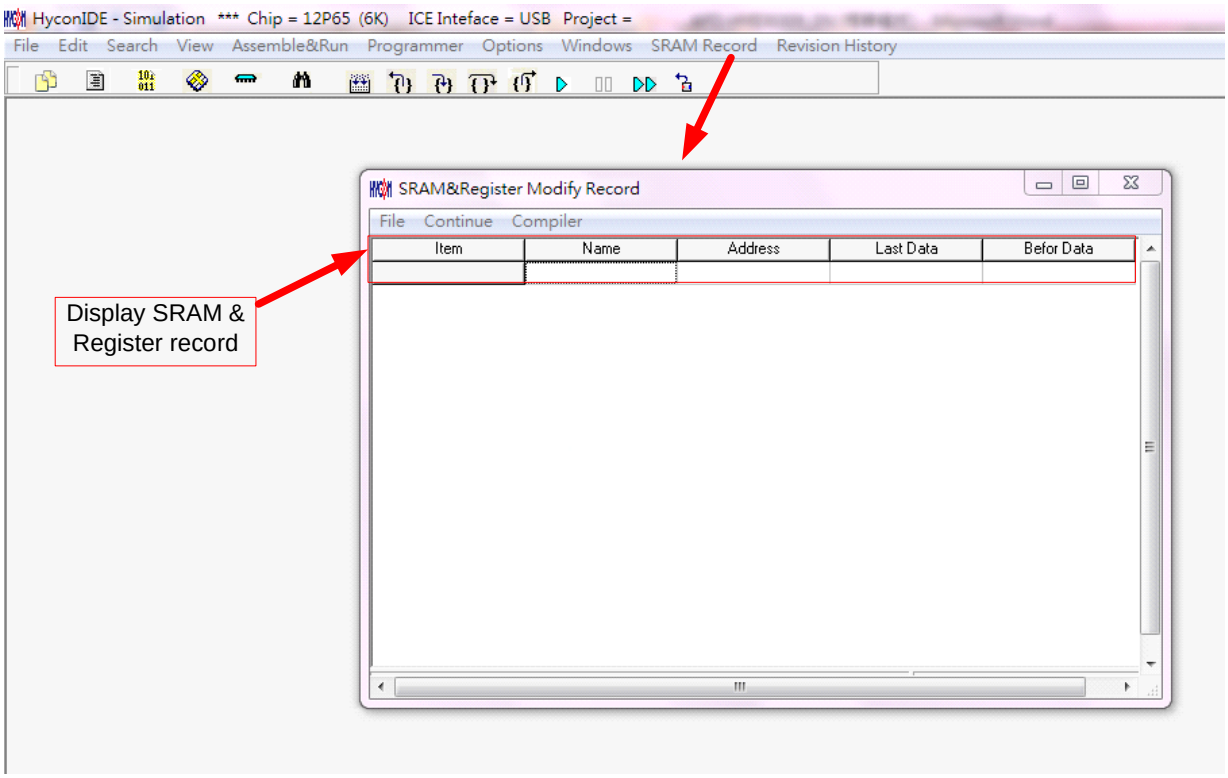
HyconIDE - Simulation *** Chip = 12P65 (6K) ICE Inteface = USB Project =
File Edit Search View Assemble&Run Programmer Options Windows SRAM Record Revision History
SRAM&Register Modify Record
File Continue Compiler
Item
Name
Address
Last Data
Befor Data
Display SRAM & Register record

Figure 63

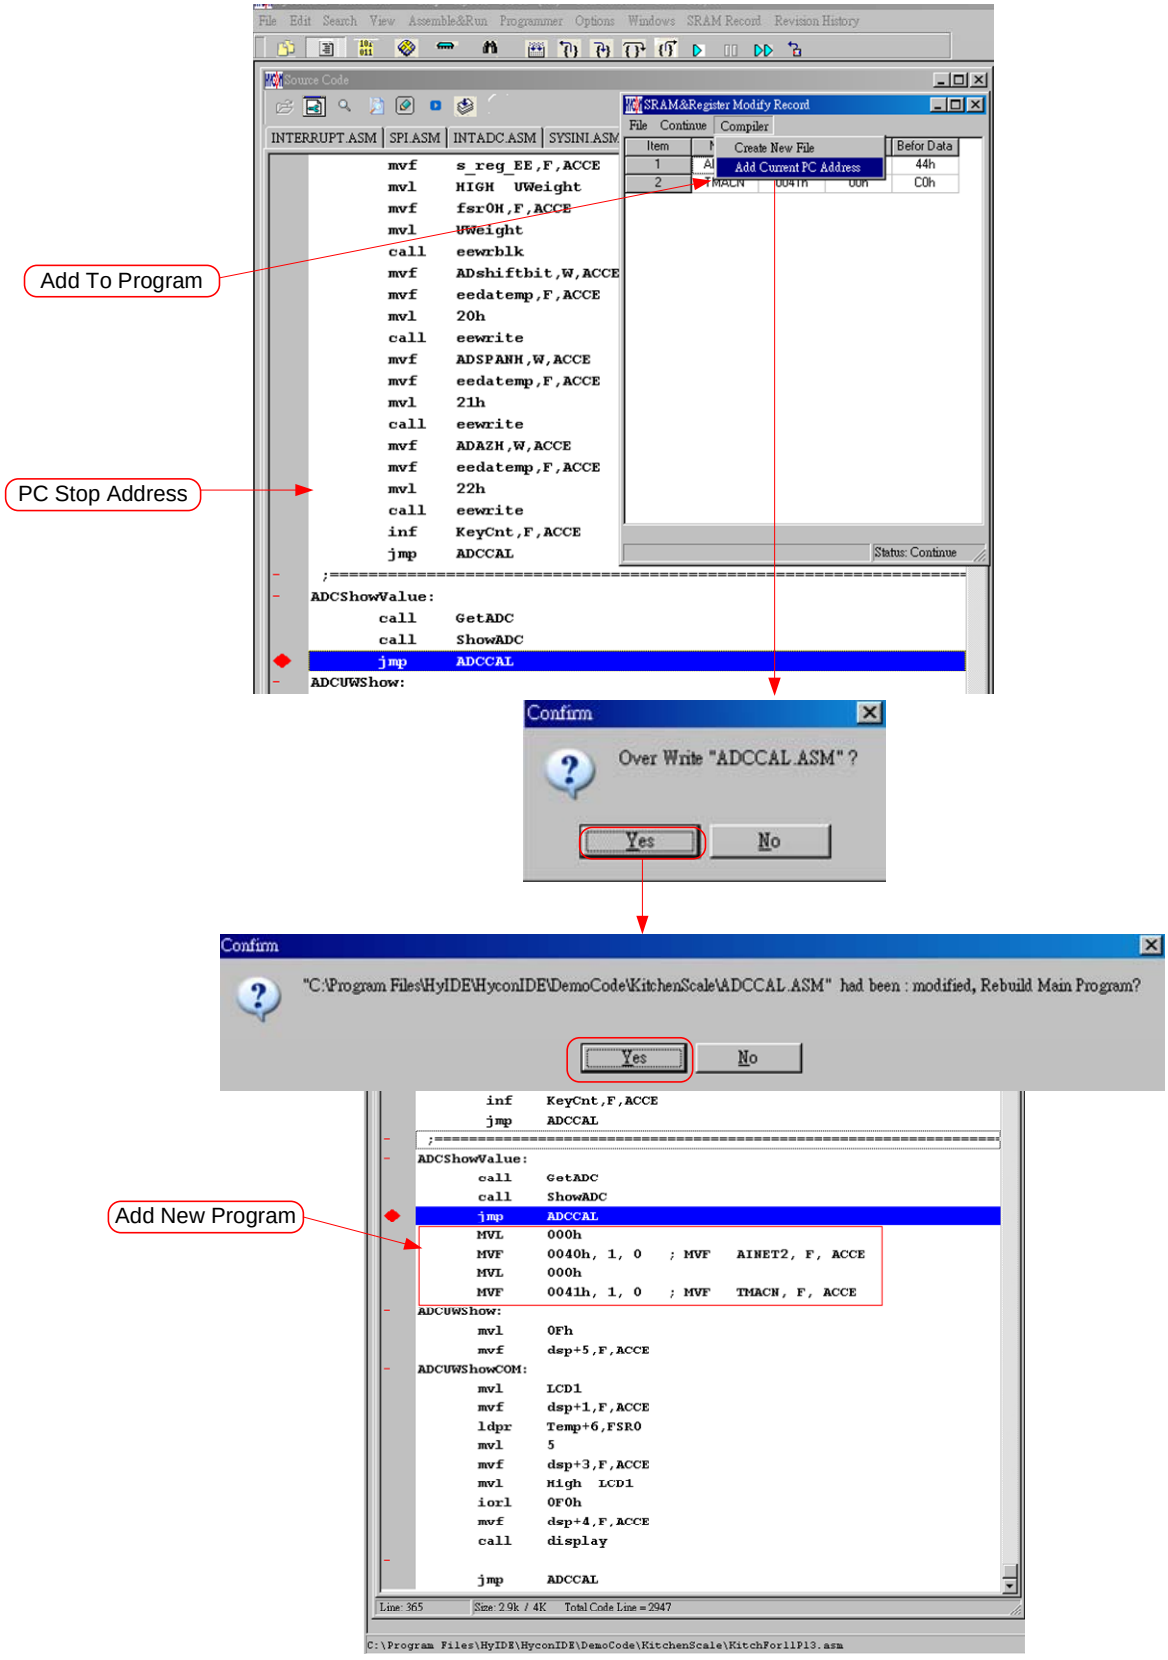
Add To Program
PC Stop Address
Add New Program
SRAM&Register Modify Record
Create New File
Add Current PC Address
Confirm
Over Write "ADCCAL.ASM" ?
Yes
No
"C:\Program Files\HyIDE\HyconIDE\DemoCode\KitchenScale\ADCCAL.ASM" had been : modified, Rebuild Main Program?

Figure 64

3.10 Hint Function of Source Code Window

If users intend to know Register or SRAM value and Address in source code window, point the cursor to Register or SRAM, the name, address and data can be revealed.

This function is only applicable to the instructions below:

CLRF, ADDF, INF, INSZ, DCF, DCSZ, SUBF, COMF, ADDC, ANDF, IORF, XORF, SUBC, RRF, SETF, MULF, RLF, JZ, RRFC, RLFC, SWPF, DAW, INSUZ, DCSUZ, ARLC, ARRC, CPSG, CPSL, CPSE, TFSZ, BTFG BSF, BCF, BTSS, BTSZ, MVFF (Not Macro).

- Only the first followed argument is effective as Figure 655 described.
- When command is BCF, BSF, BTSS, BTSZ and BTGF, Byte value will be revealed if the cursor points to the first argument. If the cursor points to the second argument, it will display the specified Bit value (1 or 0) as Figure 666 illustrated.
- When command is MVFF (not Macro), the first argument value will appear if the cursor points to the first argument. If the cursor points to the second argument, argument value will show up as shown in Figure 67.
- If the argument is INDF0, POINC0, PODEC0, PRINC0, INDF1, POINC1, PODEC1 and PRINC1, the Data will be FSR0 or the address Data of FSR1 as Figure 688 described.
- If the argument is PLUSW0 or PLUSW1, the Data is FSR0+WREG or the address Data of FSR1+WREG as illustrated in Figure 699.

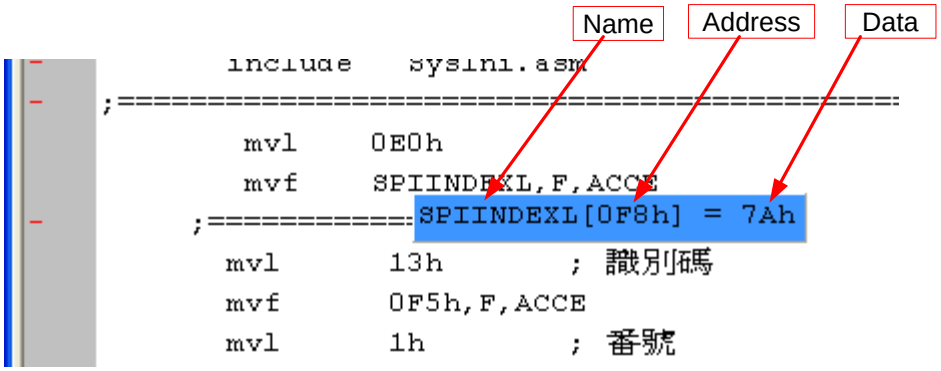

Figure 65

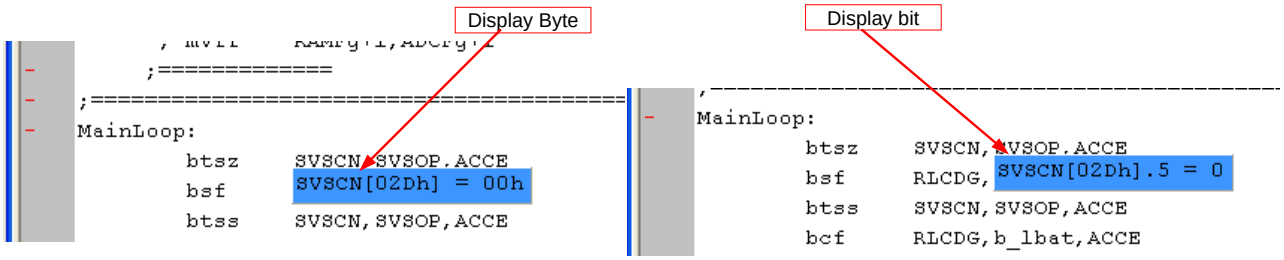

Figure 66

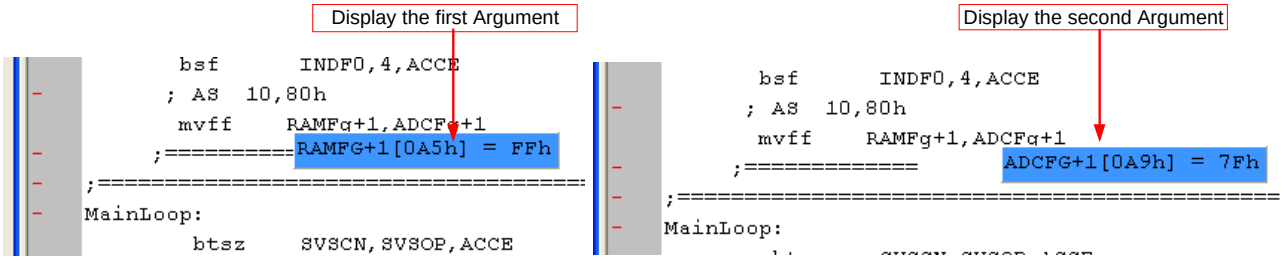

Figure 67

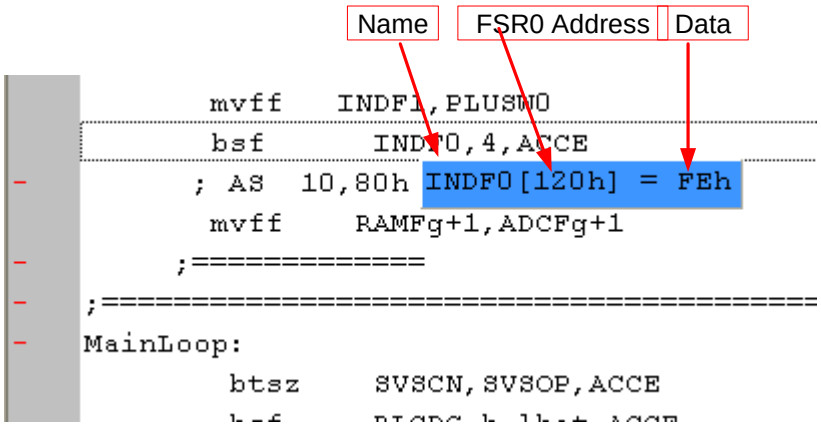

Figure 68

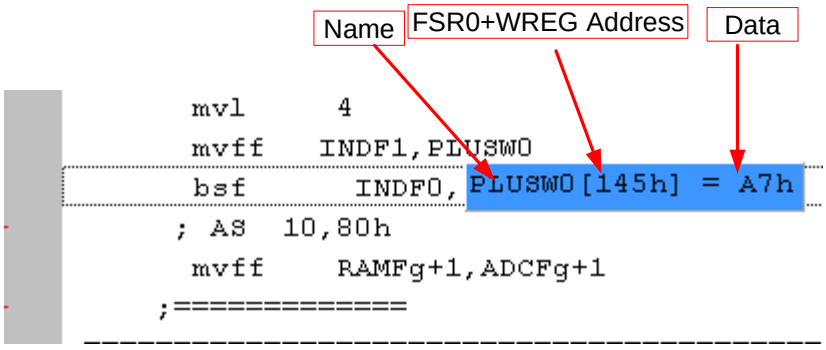

Figure 69

4. Programming Windows

4.1 Interface Setup

Click “Options”, a window will appear. Click the interface setup, as shown in Figure 70.

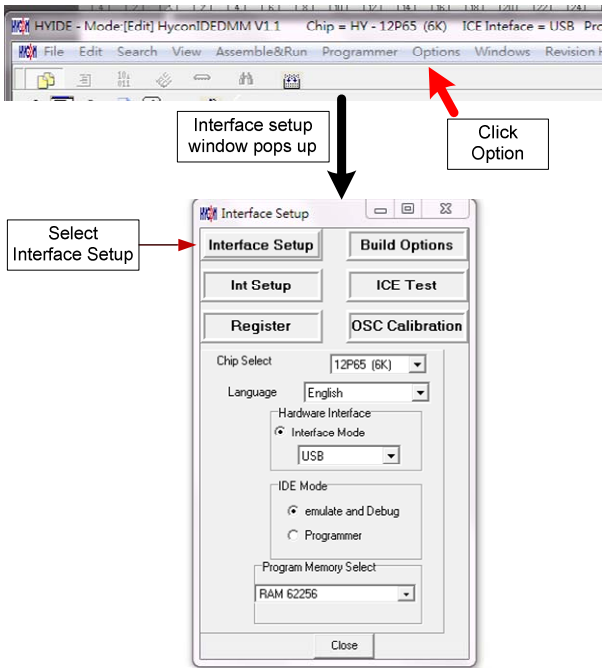

Figure 70

Chip Select → Choose the specific programming IC part no. If programmed IC differs from the selected IC, Blank Check, Program and Verify will fail.

Language → Choose operation interface language, like Chinese or English.
Hardware Interface → USB interface or Parallel Port interface is selectable.

IDE Mode → Programmer or emulate and Debug is selectable.

When interface setup finished, click Build Options to select programming configuration. As described in Figure 71.

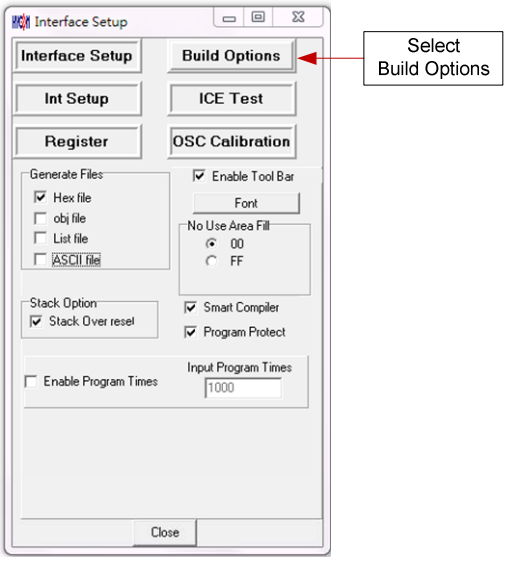

Figure 71

Generate Files → Choose generated file after assembly

Stack Option → Choose whether to reset when stack overflow or stack full after OTP program operation.

No Use Area Fill → Fill up 00 or FF in unused program space after assembly.

Smart Compiler → Choose whether to simplify assembly.

Enable Program Times → Choose whether to enable Download program times.

Input Program Times → Input Download program times (Maximum: 2147483646. Minimum: 1).

After assembly finished, click “ICE Test” to test ICE operation voltage as Figure 72 (Connect Adapter 9V and connect USB Line to ICE. Make sure the ICE is connected, and then click “Option”).

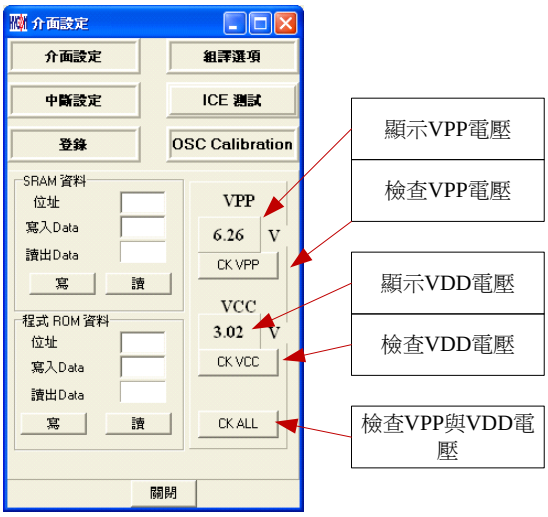

Figure 72

VPP voltage when programming: 5.6<VPP<6.6

VDD voltage when programming: 2.7<VDD<3.6

4.2 Operation Procedures

Figure 73

Open → Open the programmed source code main file.
Open Project → Open the saved project.
Save Project → Save the finished project.
Download file to Flash Memory → Download the finished Hex file after assembly to programmer or IDE Flash Memory.

© 2012 HYCON Technology Corp

4.2.1 Open File and Assembly

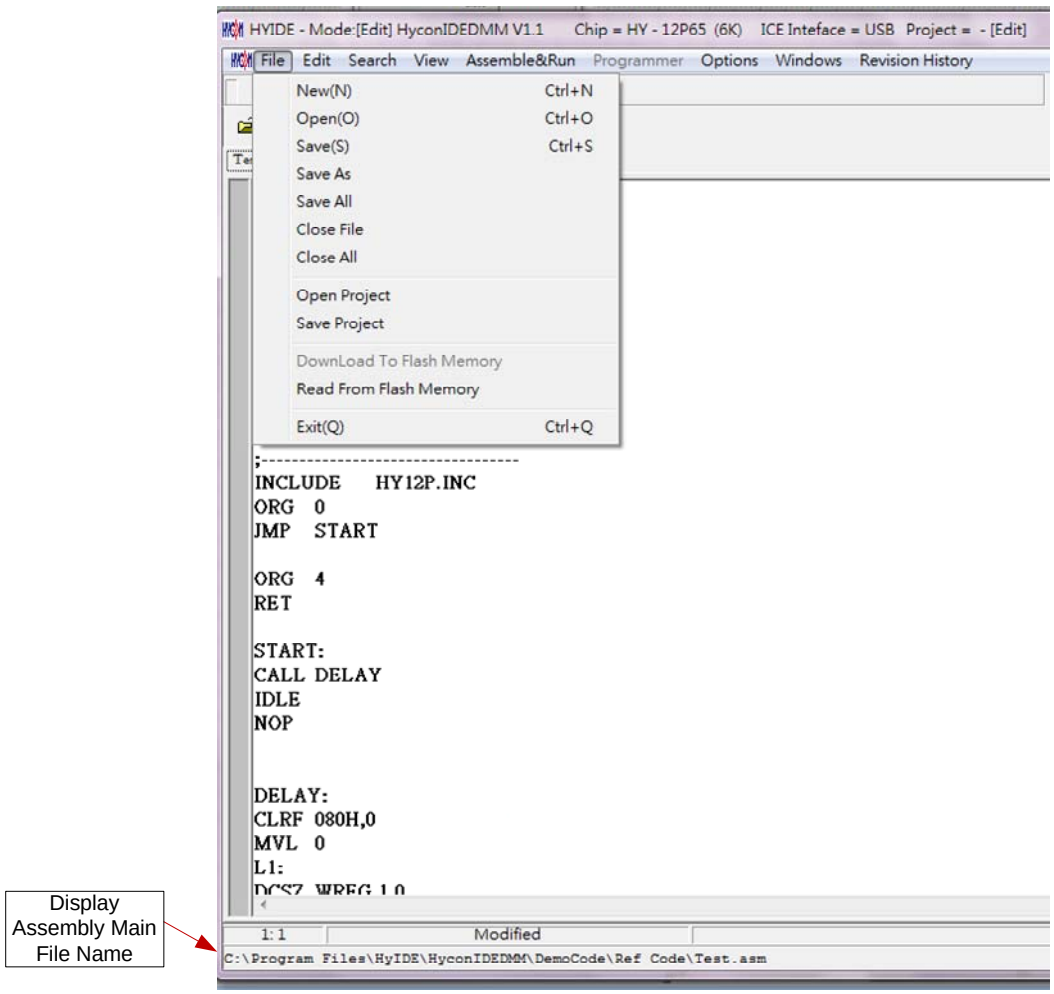

Figure 74

Open source code main file and it will be displayed as the assembly file. If the displayed name differs from main file, points the mouse to the specific file and presses mouse right key. Set this file as the assembly main file as shown in Figure 75.

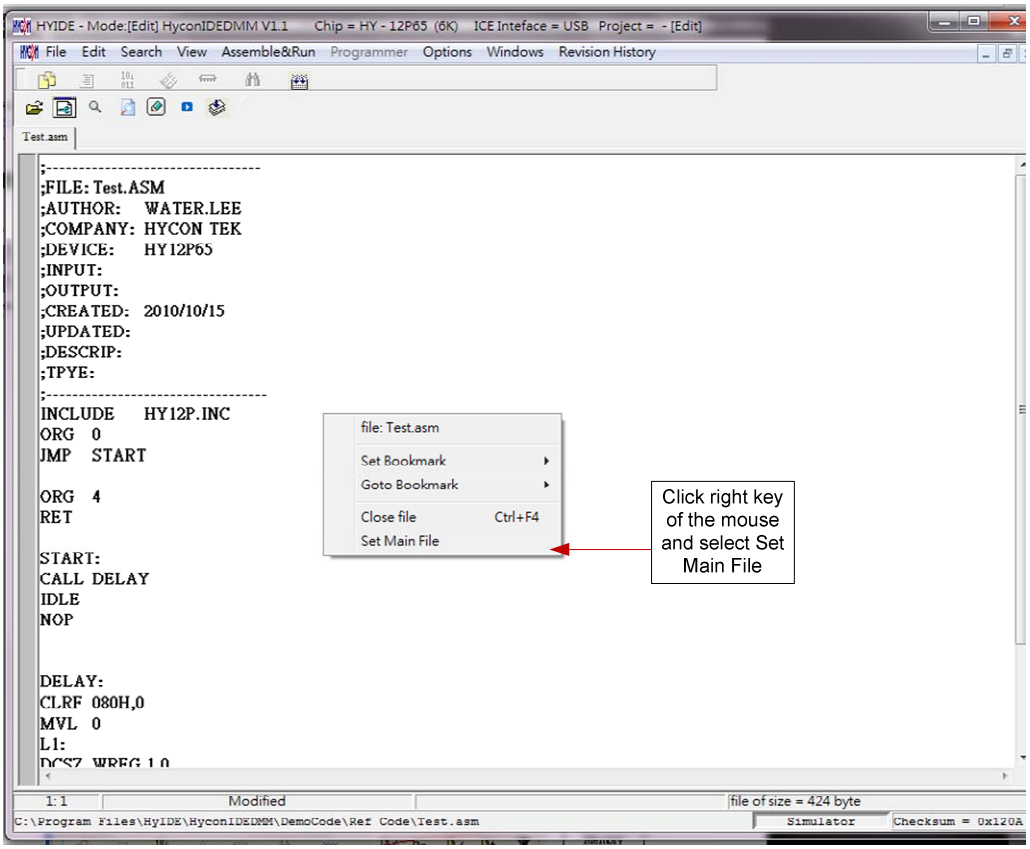

Figure 75

Assembles Source Code and download the file to programmer or IDE Flash Memory, as Figure 76 illustrated.

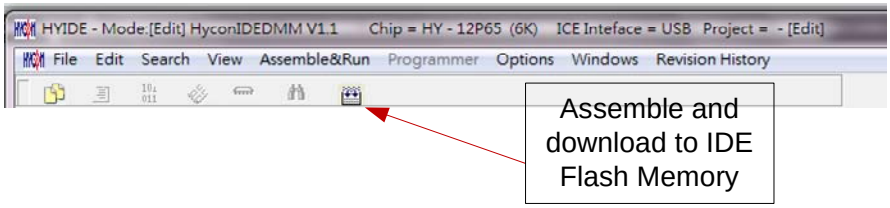
HYIDE - Mode:[Edit] HyconIDEDMM V1.1 Chip = HY - 12P65 (6K) ICE Inteface = USB Project = - [Edit]
File Edit Search View Assemble&Run Programmer Options Windows Revision History
Assemble and download to IDE Flash Memory

Figure 76

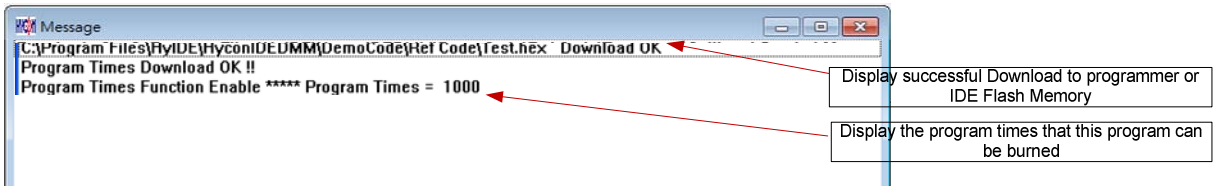
Message
C:\Program Files\HyIDE\HyconIDEDMM\DemoCode\Ref Code\Test.hex Download OK
Program Times Download OK !!
Program Times Function Enable ***** Program Times = 1000
Display successful Download to programmer or IDE Flash Memory
Display the program times that this program can be burned

Figure 77

1. When using USB interface, the program code will be loaded into programmer or Flash Memory of IDE for mass production programming.
2. If there is enabled program times in the assembly option, information column will display the programming times as shown in Figure 77.
3. After assembling completed, Hex filename and Checksum will be displayed in underneath section, as Figure 78 illustrated.

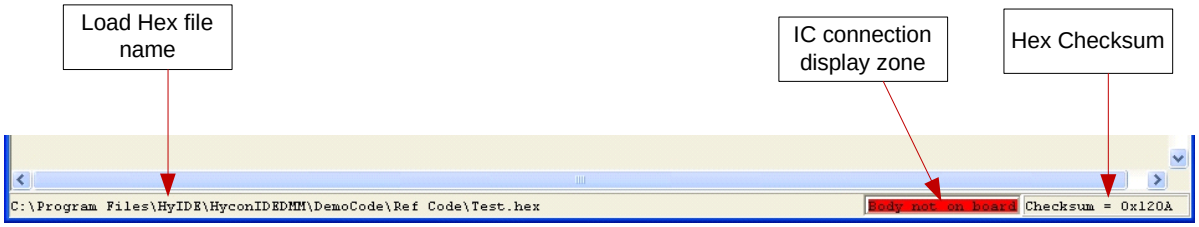
Load Hex file name
IC connection display zone
Hex Checksum
C:\Program Files\HyIDE\HyconIDEDMM\DemoCode\Ref Code\Test.hex
Body not on board
Checksum = 0x120A

Figure 78

4.2.2 Download HEX File

To program an already assembled Hex file, go to “File” → Select “Download to Flash Memory” and the Hex file. However the last option will change according to initial setup, whether to protect the program or not. If protect program was activated, the warning message will not show up, as Figure 79 described.

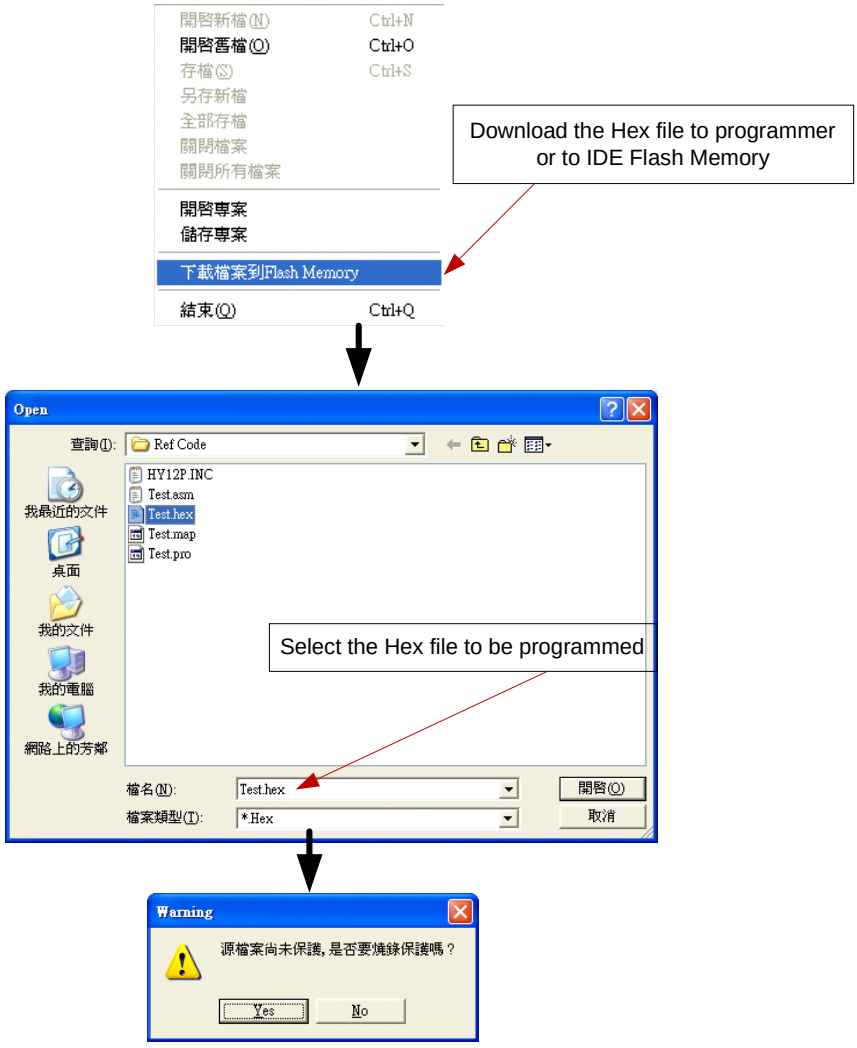

Figure 79

When download success, message column will display successful message, as Figure 77 illustrated and display Download Hex file and Checksum, as Figure 78.

4.3 PC Online OTP Programming

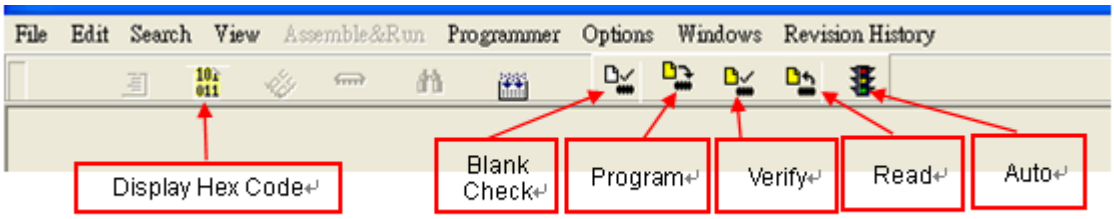

Figure 80

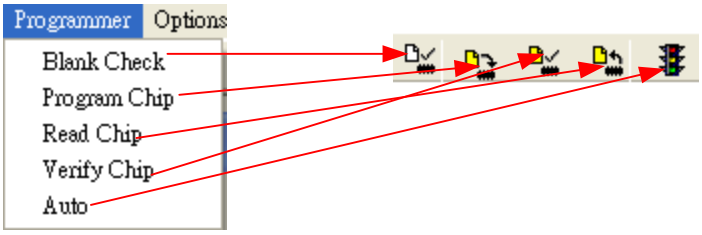

Figure 81

Blank Check, Programming, Verify and Read Commands can be implemented when the programmed file being successfully loaded into programmer or IDE Flash Memory. On the contrary, those commands will not be activated if the download failed.

Figure 82

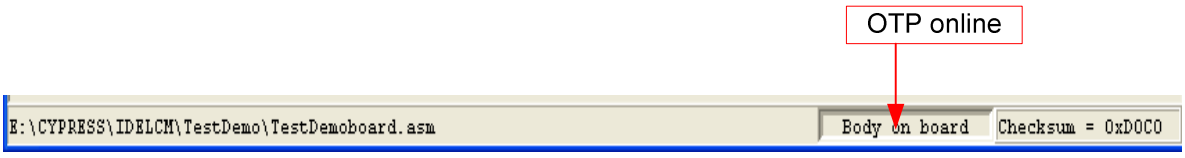

Figure 83

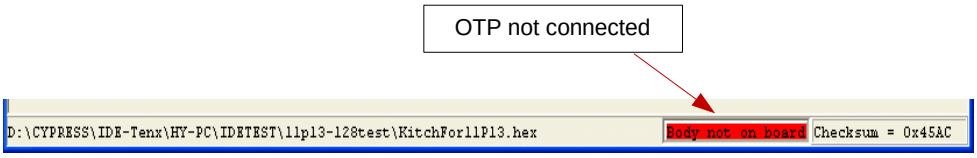

Figure 84

Make sure the selected programming IC part number is the same with the OTP part number in the topic window as Figure 70 described. When programmer executes Blank Check, Programming and Verify commands, program will check whether the IC part number and OTP programming part number are identical. If the part number is different, the data will not be written into OTP and an error message will be displayed in information column as Figure 82 described.

If users intend to find out whether the part number is correct before programming, point the cursor to ”IC Connection Status Display” and click the mouse left key. If the selected IC is correct, a message

© 2012 HYCON Technology Corp

will show up as Figure 83. If it is incorrected, the message will be displayed as Figure 88. If “Enable Program Times” has been marked up, the spare program times will display in the message column as Figure 85 illustrated.

Figure 85

4.3.1 Blank Check

Blank Check icon is . The internal code of Blank ICs that have yet been programmed is 0xFFFF. The purpose of checking the IC is to make sure the OTP address content is 0xFFFF. If the IC selection is correct and the content is empty, a message will appear as Figure 86.

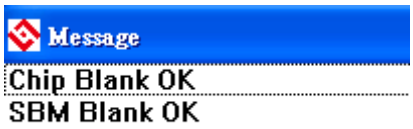

Figure 86

If the IC selection is incorrect or the content is not empty, a message will show up as Figure 87.

Figure 87

4.3.2 Program

The icon of Program is . The purpose of programming is to write Compiler accomplished program into IC OTP. When programming is completed and the IC is assembled as finished goods, programmer can operate the program as user commanded.

Program the downloaded or assembly finished Hex file (displayed at the bottom of the column) in the selected IC and verify the correctness of the programming content (please refer to Chapter 4.2.1 or 4.2.2 for programming procedures).

If the selected IC is correct and the programming succeeds, message will appear at the information column as Figure 88 illustrated. If “Enable Program Times” is ticked up, the enable program times will minus 1 and the program times left will be revealed in the message column.

© 2012 HYCON Technology Corp

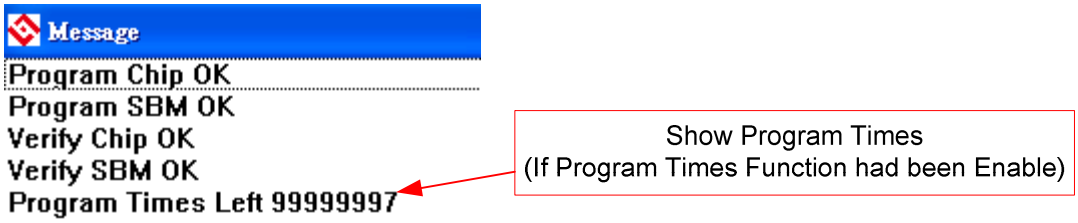

Figure 88

If the IC selection is incorrect or the programming fails, a message will show up as

igure 89.

igure 89

4.3.3 Verify

The icon of Verify is . The purpose to verify programming IC is to compare if the program written into IC OTP equals to the program downloaded to programmer or IDE Flash Memory.

Verify programming IC content consistency with the downloaded or assembled Hex file (displayed at the bottom of the column). If the IC is protected by program, this verification is ineffective or the comparison failed.

If IC selection and program verification is success, a message will appear as Figure 90.

Figure 90

If IC selection is incorrect or the program verification miscarries, a message will pop up as Figure 91.

Figure 91

4.3.4 Read

The icon of Read is . The purpose to read the IC is to verify the consistency of OTP Checksum and programmed Hex file. To read IC content, the procedures are illustrated as Figure 92. Its content will reveal at ”Display Code” window.

If the IC is protected by program, this function is ineffective or the comparison failed.

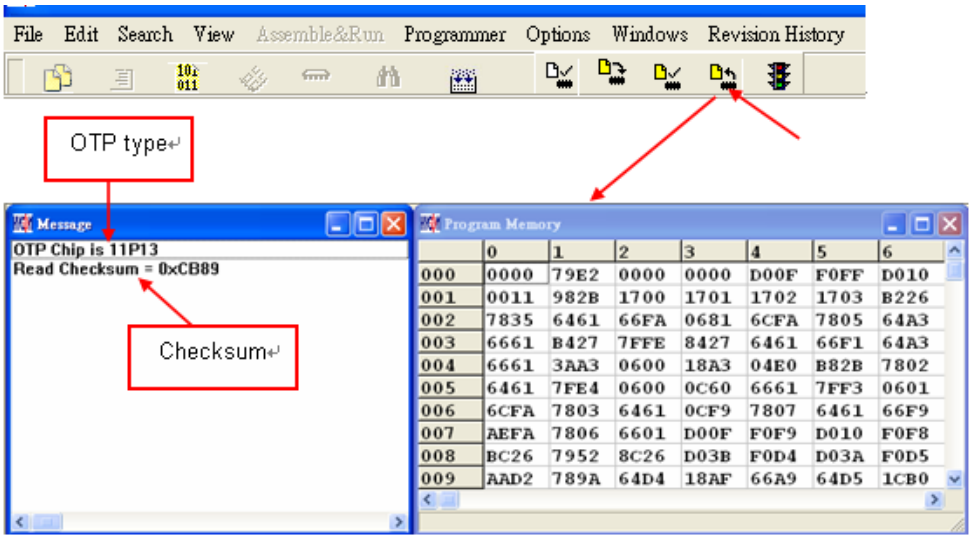

Figure 92

4.3.5 AUTO

The icon of Auto is . Auto integrates Blank Check, Program and Verify function. If user selects Auto, it will first check whether the IC is blank, then to program and verify.

After the execution succeeded, a message will be displayed as Figure 93 displayed. If the option, ”Enable Program Times” is ticked up, the program permitted times will reduce 1 and the program times left will be shown in the message column.

Figure 93

If any function fails, the whole process will stop and display an error message in the message column.

4.4 PC Offline Programming

4.4.1Programming Description

As the development process evolves to engineering trial production, the programmer can be used alone. It is not necessary to connect programmer to PC.

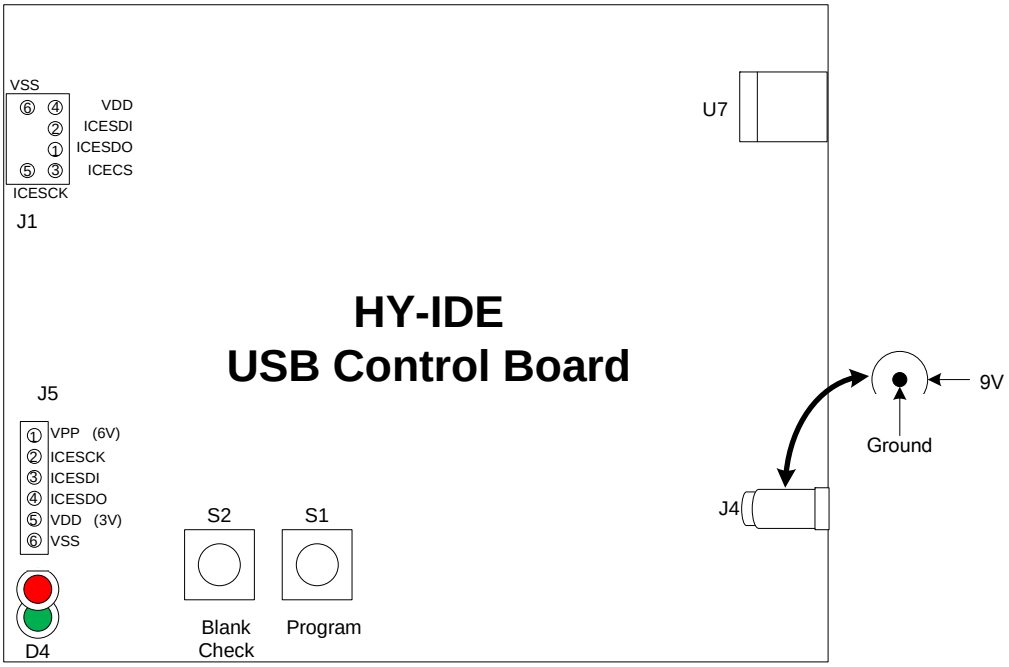

Figure 94

- J4 : Adapter 9V input

  supply programming power source, connected when programming OTP
- U7 : USB connector to PC

  Downloading program for emulation and debug

  Downloading programming code for HY12P series
- J5 : HY12P series programming control port

  PIN 1 VPP(6V) connects to VPP of the IC

  PIN 2 ICECK connects to PSCK of the IC

  PIN 3 ICESDI connects to PSDI of the IC

  PIN 4 ICESDO connects to PSDO of the IC

  PIN 5 VDD(3V) connects to VDD of the IC

  PIN 6 VSS connects to VSS of the IC
- S1 : IC programming button
- S2 : Blank Check key
- D4 : Two-color LED；

  Red LED: OTP programming, Blank Check…failure signal.

  Green LED: OTP programming, Blank Check…success signal.

  Green LED: USB/Adapter power-on signal.

© 2012 HYCON Technology Corp

Figure 95 shows the connection way of connecting programming IC to control board programming pin when PC online.

Figure 95

Figure 968 shows the connection way of connecting offline programming IC to control board programming pin when PC offline.

Figure 96

- To implement offline operation, Hex file must be firstly downloaded to programmer Flash Memory. The procedure can refer to chapter 4.2.1 or chapter 4.2.2.
- To implement offline operation, press S2 button to check if the IC is blank and the D4 Green LED should be lighted up.
- S1 Button is programming button. Its procedures are: Blank Check → Program → Verify.
  If ”Program Protection” of “Assemble Option” is ticked before downloading data to Flash Memory,

© 2012 HYCON Technology Corp

program protection will be executed after Verify completed. If ”Program Protection” is not picked up, it will stop after Verify accomplished and D4 Green LED will be lighted up.

- When Programming finished, please press S2 to check if the IC is blank. At this moment, the D4 Red LED should be lighted up, which means the programming is successful (data has been programmed into IC, so Blank Check failed).
- If any failure or error happened during execution procedures, D4 Red LED will be lightened up. On the contrary, D4 Green LED will be lighted up if success.

© 2012 HYCON Technology Corp

4.4.2 Program Times Restriction

The menu of ”Assemble Option” in interface setup has an option of ”Enable Program Times” as described Figure 71. This option restricts the permitted program times of download program.

This is a safety mechanism that restrains the permitted program times, preventing it from over-programming on the production line.

After ticking up ”Enable Program Times”, key in the program times in the column below ”Input Program Times” (maximum is 99999999, minimum is 1). This argument will be written into EEPROM of the programmer after the compiler programmed file is downloaded to Flash Memory. Afterwards, the enabled program times will reduce 1 each time when programming completed. If the value reduced to 0, the programming action may not be executed. At this time, an error signal (Red LED) will be lighted up but Blank Check still operates normally.

5. Troubleshooting

5.1HYCON-IDE Execution Problem

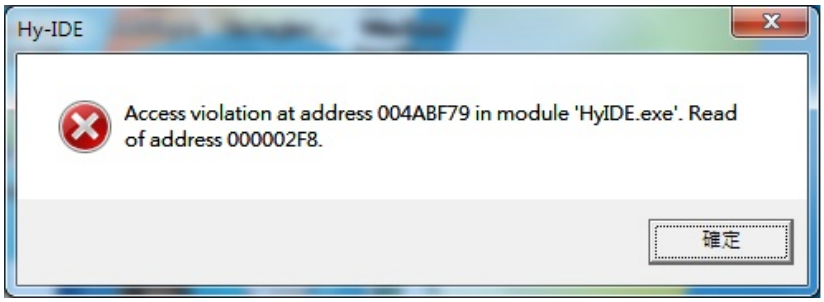

The problem might be happened under Microsoft Vista or Windows 7 system environment. To avoid the problem, the limit of authority for HYCON-IDE execution has to be set as system administrator to execute HYCON-IDE by administrator status.

6. Revision History

Major differences are stated thereinafter:

Version	Page	Revision Summary
V01	ALL	First Edition